WW10H9*****
WW90H9*****

Washing Machine

User manual

Imagine the possibilities

Thank you for purchasing this Samsung product.

Samsung
Smart Home

SAMSUNG

Untitled-36 1 2015-01-26 2:57:15

Content

Safety information 3

What you need to know about the safety instructions . . . 3
Important safety symbols . . . 3
Important safety precautions . . . 4

Installation 11

What's included . . . 11
Installation requirements . . . 12
Step-by-step installation . . . 14

Before you start 18

Initial settings . . . 18
Laundry guidelines . . . 20
Detergent Guidelines . . . 22

Operations 25

Screen . . . 25
Simple steps to start . . . 28
Course overview . . . 29
Settings . . . 33
Samsung Mobile Smart Control . . . 37
Samsung Smart Home app . . . 39
Samsung Smart Washer app . . . 41

Maintenance 43

Eco Drum Clean . . . 43
Emergency drain . . . 44
Cleaning . . . 45
Recovery from freezing . . . 48
Care against an extended time of disuse . . . 48

Troubleshooting 49

Checkpoints . . . 49
Information codes . . . 50

Specifications 51

Protecting the environment . . . 51
Fabric care chart . . . 52
Specification sheet . . . 53

Untitled-36 2 2015-01-26 2:57:15

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.

Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠	**WARNING**: Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**.
⚠	**CAUTION**: Hazards or unsafe practices that may result in **personal injury and/or property damage**.
	NOTE

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Untitled-36 3 2015-01-26 2:57:15

Important safety precautions

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Untitled-36 4 2015-01-26 2:57:15

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

⚠ WARNING: Critical installation WARNINGS

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord into an AC 220 - 240 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket so that the cord is running towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

- If a child places a bag over its head, it may suffocate.

When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Untitled-36 5 2015-01-26 2:57:15

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

⚠ CAUTION: Installation CAUTIONS

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.

- Failure to do so may result in abnormal vibrations, movement, noise, or problems with the product.

⚠ WARNING: Critical usage WARNINGS

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the washing machine door lever.

- If trapped inside the product, children may suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Untitled-36 6 2015-01-26 2:57:15

Do not open the washing machine door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washing machine while an operation is in progress.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or the infirm use this washing machine without proper supervision. Do not let children climb in or onto the appliance.

- This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

- Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power plug and contact you nearest Samsung Customer Service.

- This may result in electric shock or fire.

Untitled-36 7 2015-01-26 2:57:16

⚠ CAUTION: Usage CAUTIONS

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

- If the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the water tap slowly.

Open the water tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may damage a product part or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

- If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

Ensure that the screws on the water supply hose connector are properly tightened.

- Failure to do so may result in property damage or injury.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the product.

- If the screws on the water supply hose connector are loose, it may result in a water leak.

The product you have purchased is designed for domestic use only.

Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, this may result in electric shock, fire or problems with the product.

Do not place objects that generate electromagnetic fields near the washing machine.

- This may result in injury due to a malfunction.

Untitled-36 8 2015-01-26 2:57:16

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.

- This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.

(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.

- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come off and stick to inside the drum, and this may result in malfunction such as a drainage error.

Do not operate the washing machine when the detergent drawer is removed.

- This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent drawer.

- This may result in injury as your hand may be caught by the detergent input device.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.

- This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.

- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.

- This may result in problems with the washing machine.

Do not use natural hand-washing soap for the washing machine.

- If it hardens and accumulates inside the washing machine, it may result in problems with the product, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

Untitled-36 9 2015-01-26 2:57:16

- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washing machine, it may result in a water leak.

Make sure that the pockets of all the clothing items to be washed are empty.

- Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by color on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

- This may result in discoloration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

- Failure to do so may result in injury.

⚠ WARNING: Critical cleaning WARNINGS

Do not clean the appliance by spraying water directly onto it.

Do not use the a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Untitled-36 10 2015-01-26 2:57:16

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

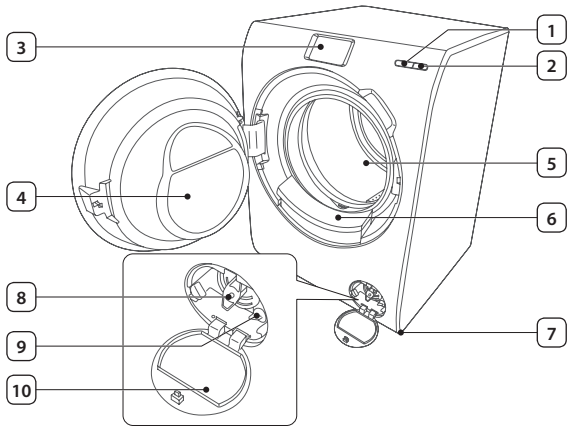

1	Start button
2	Power button
3	Control screen
4	Door
5	Drum
6	Auto Dispense unit
7	Levelling feet
8	Debris filter
9	Emergency drain tube
10	Filter cover

Spanner

Bolt caps



Hose guide

Cold water supply hose

Hot water supply hose



Aqua pebble set

Bolt caps : The provided number (3 to 6) of bolt caps depends on the model.
Hot water supply hose: Applicable models only.
Aqua pebble set: 200 ml and 100 ml (MAX).

Untitled-36 11 2015-01-26 2:57:16

Installation requirements

Electrical supply and grounding

- AC 220-240 V / 50 Hz fuse or circuit breaker is required
- Use an individual branch circuit specific to the washing machine

To ensure proper grounding, the washing machine comes with a power cord featuring a three-prong grounding plug for use in a properly installed and grounded outlet.

Check with a qualified electrician or serviceperson if you are not sure about the grounding.

Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician to install a proper outlet.

WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Improperly connected grounding conductors may cause electric shock.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressure less than 50 kPa may cause the water valve not to close completely. Or, it may take longer to fill the drum, causing the washing machine to turn off. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce the risk of leaks

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water inlet hose fittings on a regular basis.

CAUTION

Before using the washing machine for the first time, check all connections at the water valve and taps for any leaks.

Untitled-36 12 2015-01-26 2:57:16

Drain

Samsung recommends a standpipe in height of 65 cm. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.

Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are not a good resistance to vibrations and may cause the washing machine to move slightly during the spin cycle.

CAUTION

Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove or closet installation

Minimum clearance for stable operation:

Sides	25 mm	Rear	50 mm
Top	25 mm	Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the alcove or closet must have at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

Untitled-36 13 2015-01-26 2:57:16

Step-by-step installation

STEP 1 - Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 ˚C)
- Away from a heat source

STEP 2 – Remove the shipping bolts

Unpack the product package and remove all shipping bolts.

1. Loosen all shipping bolts on the rear of the machine using the supplied spanner.

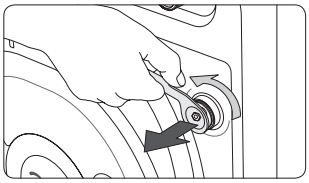

2. Fill the holes with the supplied plastic bolt caps.
   Keep the shipping bolts for future use.

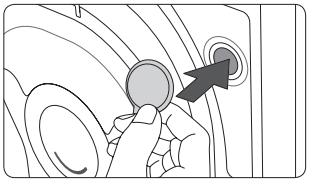

WARNING

Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.

STEP 3 - Adjust the levelling feet

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet.
2. Level the washing machine by manually adjusting the levelling feet.

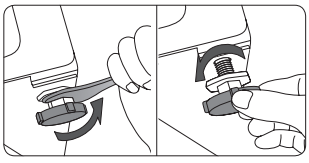

3. When levelling is complete, tighten the nuts using the spanner.

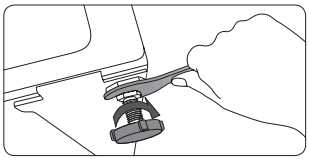

Untitled-36 14 2015-01-26 2:57:17

STEP 4 - Connect the water hose

Connect the water supply hose to the water tap.

1. Remove the **adaptor (A)** from the **water supply hose (B)**.

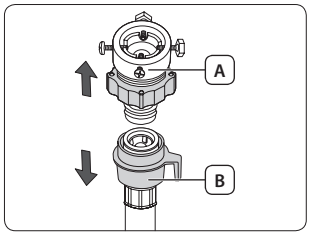

2. Use a Philips screwdriver to loosen four screws on the adaptor.

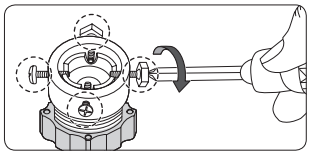

3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

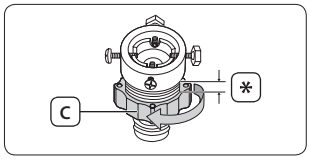

4. Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.
5. Turn **part (C)** in the arrow direction to tighten it.

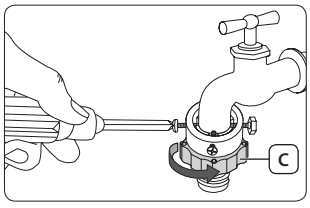

6. While holding down **part (E)**, connect the water supply hose to the adaptor. Then, release **part (E)**. The hose fits into the adaptor with a clicking sound.

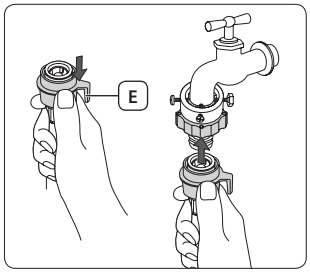

Untitled-36 15 2015-01-26 2:57:17

7. Connect the other end of the water supply hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

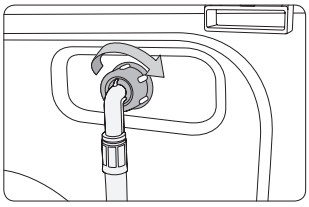

8. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above.

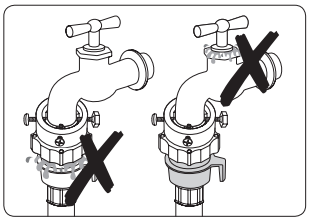

- If using a screw type of water tap, connect the water hose to the water tap as shown.

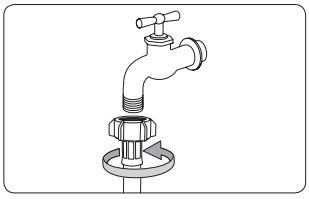

WARNING

Stop using the washing machine if there is a water leak, and contact a local Samsung service centre. Otherwise, this may cause electric shock.

CAUTION

Do not stretch the water supply hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.

- After connecting the water supply hose to the adaptor, check if it is connected properly by pulling the water supply hose downwards.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

For models with an additional hot water inlet:

1. Connect the red end of the hot water supply hose to the hot water inlet on the back of the machine.
2. Connect the other end of the hot water supply hose to the hot water tap.

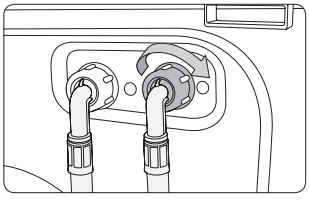

Untitled-36 16 2015-01-26 2:57:18

Aqua hose (applicable models only)

The aqua hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator (A)** in case of a leak.

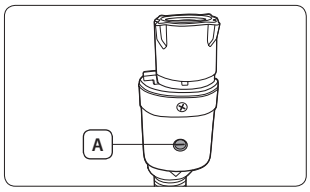

STEP 5 - Position the drain hose

The drain hose can be positioned in three ways:

Over the edge of a wash basin

The drain hose must be placed at a height of between 60 cm and 90 cm (*) from the floor. To keep the spout of the drain hose bent, use the supplied **plastic hose guide (A)**. Secure the guide to the wall using a hook to ensure stable drainage.

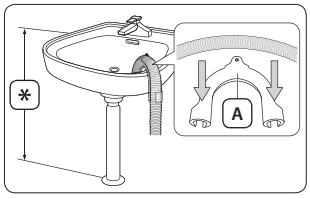

In a sink drain pipe

The drain pipe must be above the sink siphon so that the end of the hose is at least 60 cm above the floor.

In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe. Make sure the drain hose is connected to the stand pipe at a slant.

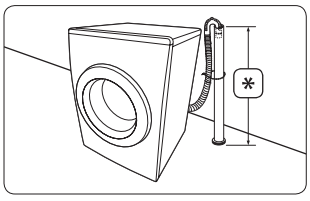

Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute

STEP 6 – Turn on the washing machine

Plug the power cord into a wall socket featuring an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press the **Power** button to turn on the washing machine.

Untitled-36 17 2015-01-26 2:57:18

Before you start

Initial settings

When the washing machine turns on for the first time, the welcome screen appears with the Samsung logo. Follow the onscreen instructions to complete the initial settings. You can change the initial settings later by accessing the Settings screen.

STEP 1 - Set Language

Set a preferred menu language.

1. Select a language.
2. Tap **Next**.

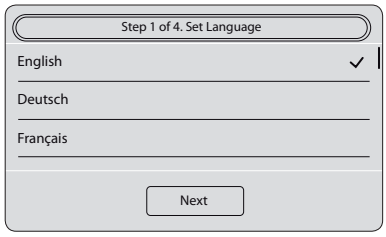

STEP 2 - Set Date & Time

Set the current date and time.

1. Tap the arrows to set the time for each time element.
2. Tap **Next**.

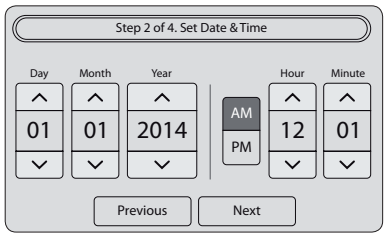

The default time is set to the 12-hour format.
To switch between the **AM** and **PM** elements, simply tap the corresponding element.

Untitled-36 18 2015-01-26 2:57:18

STEP 3 - Set Auto Dispense

The Auto Dispense unit dispenses an appropriate amount of detergent and fabric softener into the drum according to the course and cycle.

1. Both **Auto Detergent** and **Auto Softener** are set to **On** by default. To change the setting, slide the corresponding bar to **Off**.
2. Set the **Amount** and the **Water Hardness**.
3. Set the **Amount** and the **Concentration**.
4. Tap **Next**.

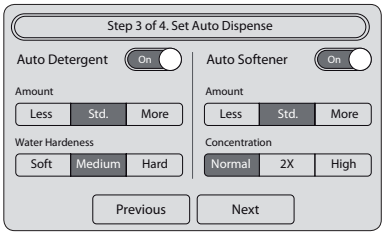

STEP 4 - Set Auto Update

Auto Update updates the firmware automatically for improved performance and/or to fix known bugs through communication with the update server. Once the firmware is updated, some functions of the washing machine may not be available depending on the firmware version.

1. To update the firmware automatically, set **Auto Update** to **On**.
2. Tap **Done**.

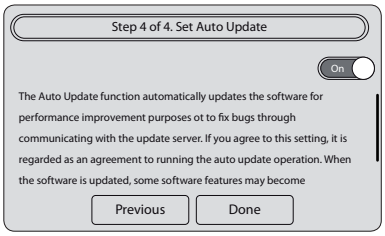

STEP 5 - Run Calibration (recommended)

Calibration ensures accurate weight detection by the washing machine. Make sure the drum is empty before running Calibration.

1. Tap **Settings** > **Calibration** > **Start**.
   - The door will be locked during the operation.
   - The drum keeps rotating clockwise and anticlockwise for several minutes.
2. When complete, the washing machine turns off automatically.

Untitled-36 19 2015-01-26 2:57:18

Laundry guidelines

STEP 1 - Sort

Sort the laundry according to these criteria:

- **Care Label**: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- **Colour**: Separate whites from colours.
- **Size**: Mixing different-sized items together in the drum improves the washing performance.
- **Sensitivity**: Wash delicate items separately using an Easy Iron option for pure, new woollen items, curtains, and silk items. Check the labels on the items.

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 - Empty pockets

Empty all the pockets of your laundry items

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroideries inside out

- If pants or jacket zippers are open while washing, the drum may be damaged. Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before starting the wash.

STEP 3 - Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Small, light clothing such as socks, gloves, stockings, and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4- Prewash (if necessary)

Select the Prewash option for the selected course if the laundry is heavily soiled. Do not use the Prewash option when detergent is manually added into the drum.

Untitled-36 20 2015-01-26 2:57:19

STEP 5- Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly. For the load capacity for the type of clothing, see page **29**.

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum spin cycle speed is 800 rpm, and the load capacity is 2.0 kg or less.

CAUTION

If the laundry is unbalanced and the "**UE**" error code is displayed, redistribute the load. Unbalanced laundry may reduce the spinning performance.

STEP 6- Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.

CAUTION

When washing wool using the wool course, use only a neutral liquid detergent. If used with the Wool course, powder detergent may remain on the laundry and discolour the laundry.

Untitled-36 21 2015-01-26 2:57:19

Detergent Guidelines

Auto Dispense

The washing machine provides a two-compartment dispenser: the left compartment for detergent, and the right compartment for fabric softener. The Auto Dispense unit dispenses an appropriate amount of detergent and fabric softener into the drum according to the course and cycle.

CAUTION

- Use only a liquid detergent and fabric softener with the Auto Dispense unit.
- Make sure the Auto Dispense unit is inserted completely. The washing machine will not start operating until the Auto Dispense unit is inserted properly.
- When applying a different detergent, make sure to clean the detergent compartment first.
- Do not mix detergent with fabric softener in either compartment.
- To prevent detergent from hardening, do not open the cap once the detergent has been applied to the compartment.
- Do not use any bleach that may cause corrosion and/or generate gas.
- Do not turn the Auto Dispense unit upside down. The content may spill out of the vents.
- Do not press the outlet at the bottom of the Auto Dispense unit while moving the unit. The content may leak.
- Use caution when inputting detergent or fabric softener in the unit. The content may spill around.
- Make sure to remove the Auto Dispense unit before applying detergents.
- When removing the Auto Dispense unit to check the remaining amount of detergent upon or before an error message, the unit may have some small amount of detergent remaining or leaking from the bottom of the unit.
- Fully insert the Auto Dispense unit. Incomplete insertion may cause the unit to fail in dispensing.
- By default, Auto Dispense turns off in the Delicates, Wool, Baby Care, or Outdoor Care courses.

  To enable Auto Dispense in these courses, tap **Settings** or the **Quick Panel Bar** > **Auto Dispense**, and change the settings as necessary.

Untitled-36 22 2015-01-26 2:57:19

1. Open the door, and pull out the Auto Dispense unit from the washing machine.

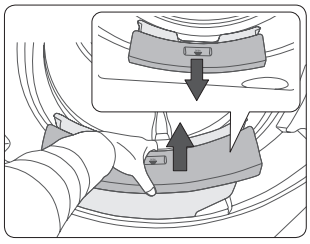

2. Turn the left knob anticlockwise to open, and apply detergent to the left compartment to the max line.
3. Turn the right knob anticlockwise to open, and apply fabric softener to the right compartment to the max line.
4. Lock the knobs by turning them clockwise.

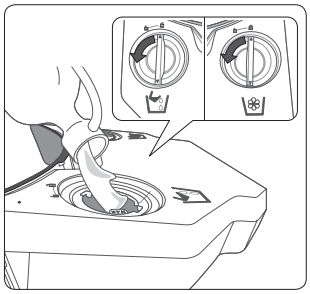

5. Reinsert the Auto Dispense unit in the original position.
   Use caution when inserting the unit as the content may spill out of the vents on either side.
6. Turn on **Auto Detergent** and **Auto Softener**.
   See "**Auto Dispense**" on page **33**.

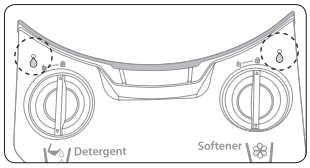

Untitled-36 23
2015-01-26 2:57:19

Manual Dispense

In case you don't want to use the dispenser (Auto Dispense unit), you can either dose the detergent directly into the drum or use the provided aqua pebble when applying detergent manually. The Aqua Pebbles comes in two sizes and are provided as accessories with your appliance. Choose an Aqua Pebble that is appropriate for the detergent amount.

1. Turn off **Auto Detergent**.
   See "**Auto Dispense**" on page **33**.
2. Apply a powder, gel, or liquid detergent to a proper **Aqua pebble (A)**. Check the amount marker on the inner side of the aqua pebble.

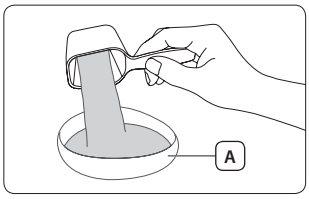

3. Insert the aqua pebble near the end of the drum.

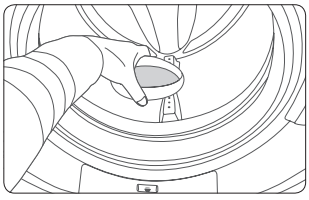

When the wash is complete, remove the aqua pebble from the drum and keep it clean for later use.

CAUTION

- Fabric softener can be applied only using the Auto Dispense unit. Manual input is not allowed.
- Use caution when inserting the aqua pebble as it is supposed to be balanced at the first of the wash. Tipping the aqua pebble before the start of a wash may cause detergent residue on the laundry at the end of the wash, causing discolouration to laundry and/or reduced washing performance.
- Do not apply detergent to both the auto detergent compartment and the aqua pebble.
- When applying a different detergent, make sure to clean the aqua pebble first.
- Do not insert the aqua pebble into a folded blanket or between different laundry items.
- Do not select the Pre Wash option when using the aqua pebble.
- A heavy application of detergent may cause the following problems, resulting in a system failure and/or shortened product life.
- Excessive amounts of detergent cause bubble surpluses and extend the rinse time as a result.
- This may also cause detergent remaining in the drum after the wash is complete.
- Apply appropriate amounts of detergent according to the specifications of the detergent manufacturer.
- In case of manual detergent dosage, it is recommended to use the Aqua Pebble when coloured laundry items are washed.

Untitled-36 24 2015-01-26 2:57:19

Operations

Screen

The actual screen may differ from the image below depending on the model.

Main screen

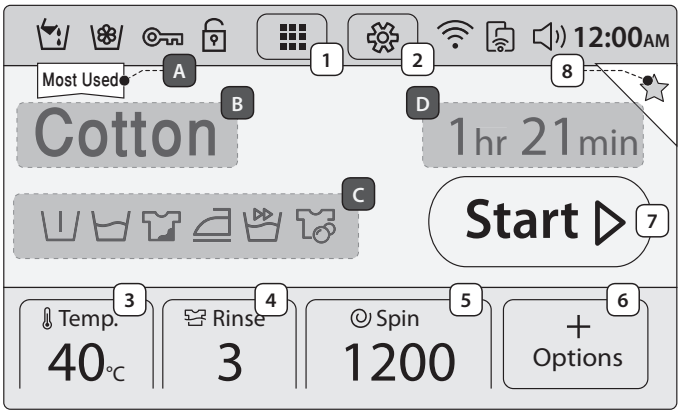

Buttons

1	**Course**	Tap to enter the course tile.
2	**Settings**	Tap to enter the settings screen.
3	**Temp.**	Tap to change the temperature for the current course.
4	**Rinse**	Tap to change the rinse times for the current course.
5	**Spin**	Tap to change the spinning speed for the current course.
6	**Options**	Tap to enter the course options screen.
7	**Start**	Tap to start an operation.
8	**Favourite**	Tap to add the current course configuration to the Favourite list. You can add up to 4 custom courses, which appear at the first of the course tile.

Information

A	**Most Used**	Displays the most frequently used course.
B	**Current course**	Displays the current course.
C	**Active option**	Displays an active option(s) for the current course.
D	**Estimated time**	Displays the estimated operation time for the current course.

Untitled-36 25 2015-01-26 2:57:19

Status bar

	Auto Detergent	If this indicator turns on, Auto Detergent is enabled.
	Auto Softener	If this indicator turns on, Auto Softener is enabled.
	Door Lock	If this indicator turns on, the door is locked to prevent a door opening during operation.
	Child Lock	If this icon turns to a closed lock [ ], the Child Lock is set to prevent accidents by children or infants.
	Network	It displays the Wi-Fi network connection state.
	Smart Control	If this indicator turns on, the washing machine can be controlled on a mobile device.
	Sound	If the icon turns to Mute [ ], no sound is output.
12:00AM	**Time**	The current time is displayed.

Quick panel bar

On the **Quick panel bar**, 6 items are available: Child Lock, Drum Light, Auto Detergent, Auto Softener, Network, and Smart Control.

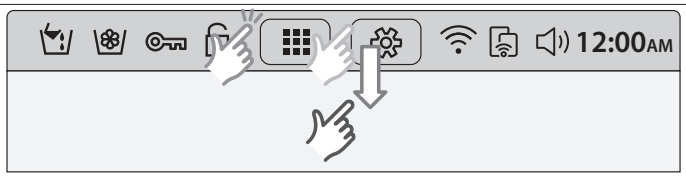

1. Tap the **Status bar**, or swipe it downward to display available items.

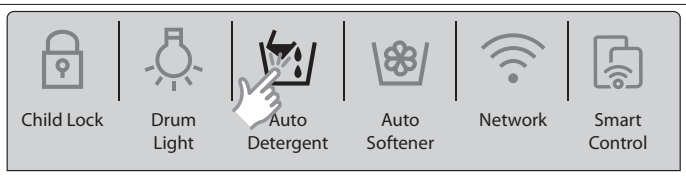

2. Tap to turn an item on/off, or change the current settings.

- For advanced settings, go to the settings screen, and make changes to your preference.
- Active items are lit while inactive items are greyed out.

Untitled-36 26 2015-01-26 2:57:21

Options screen

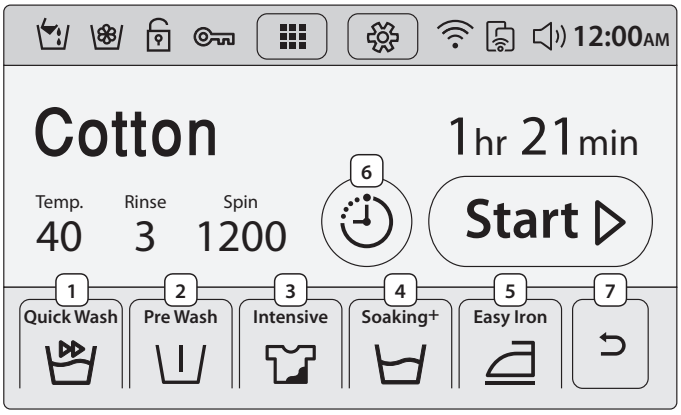

1	**Quick Wash**	Specific for less soiled clothing for a load less than 2 kg.
2	**Pre Wash**	A preliminary washing cycle is added before the main wash.
3	**Intensive**	The operation time for each cycle is longer than normal.
4	**Soaking+**	This is useful to remove stubborn stains on laundry.
5	**Easy Iron**	This is useful to reduce wrinkles.
6	**Delay End**	Use this to specify the end time of a selected course. See page **32**.
7	**Return**	Return to the main screen.

For details on each option, see "**Options**" on page **31**.

Untitled-36 27 2015-01-26 2:57:21

Simple steps to start

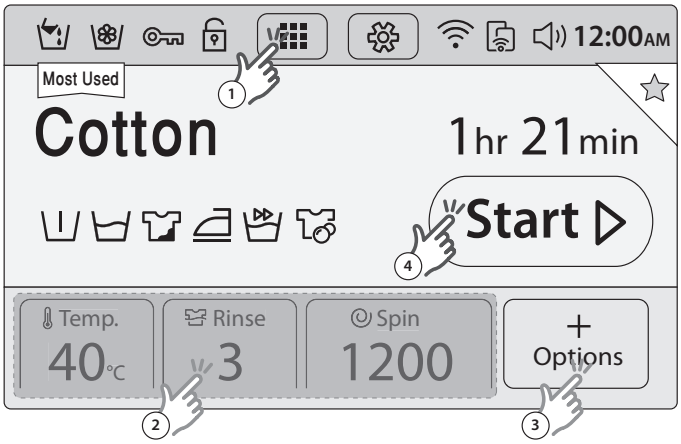

1. Press the **Power** button to display the main screen.
2. On the main screen, tap the **Course** icon on the top centre to display the course tile.
3. Select a course. The washing machine supports 22 courses.
4. Change the course settings (**Temp.**, **Rinse**, and **Spin**) if necessary.
5. Tap the **Options** icon at the bottom right corner. Then, select options and change the option settings.
6. Tap **Start**.

- The washing machine has the default course settings and options available for each course. You can accept the default or make changes to your preference.
- You can select a course on the main screen. Simply swipe the screen to the left to open the next course. To return to the previous list, simply swipe to the right.

Untitled-36 28 2015-01-26 2:57:21

Course overview

Standard courses

Course	Description & Max load (kg)	
Favourite	• Add the current course configuration to the Favourite list, and quickly access the course configuration later. You can add up to 4 custom courses, which appear at the first of the course tile.	-
Most Used	• The most frequently used course is displayed on the upper left corner of the main screen by default.	-
Auto Optimal Wash	• Auto Optimal Wash adjusts the detergent amount and the course cycles according to the laundry weight and contamination level. This is best used with the Auto Dispense feature.	Max
Cotton	• For cottons, bed linens, table linens, underwear, towels, or shirts. • The washing time and the number of rinse cycles are automatically adjusted according to the load.	Max
Synthetics	• For blouses or shirts that are made of polyester (diolen, trevira), polyamide (perlon, nylon), or the like.	5
Denim	• Featuring a higher water level in the main wash and an extra rinse cycle to ensure that no powder detergent remains.	3
Dark Garment	• Featuring additional rinses and reduced spinning to ensure that the laundry is washed gently and rinsed thoroughly.	4
Super Speed	• Fast completion within 1 hour for daily items such as underwear and shirts.	5
Super Eco Wash	• The Eco Bubble technology helps reduce power consumption. Featured by low-temperature washing efficiency, Super Eco Wash compares its washing performance and power saving to the conventional Eco Bubble-less Cotton cycle.	4
Outdoor Care	• For outdoor clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fibre.	2
Baby Care	• Featuring a high-temperature wash and extra rinses to ensure that no powder detergent remains.	4
Wool	• Specific for machine-washable wool for loads less than 2.0 kg. • The wool course features gentle cradling and soaking to protect the wool fibres from shrinkage/distortion. • A neutral detergent is recommended.	2

Untitled-36 29 2015-01-26 2:57:21

Course	Description & Max load (kg)	
Delicates	• For sheer fabrics, bras, lingerie (silk), and other handwash-only fabrics. • For best performance, use liquid detergent.	2
Bedding	• For bed spreads, bed sheets, bedding covers, etc. • For best results, wash only 1 type of bedding and make sure the load weighs less than 2.5 kg.	2.5
Spin	• Featuring an additional spin cycle to remove water thoroughly.	-
Rinse+Spin	• Featuring an additional rinse after applying fabric softener to the laundry.	-
Eco Drum Clean	• Cleans the drum by removing dirt and bacteria from the drum. • Perform once every 40 washes with no detergent or bleach applied. • Make sure the drum is empty. • Do not use any cleaning agents for cleaning the drum.	-
Cotton	• Optimal performance with lower energy for cotton fabrics, bed linens, table linens, underwear, towels, or shirts.	Max

Specialty Cycle

Six specialty courses are designed to effectively remove specific types of stains and dirt that may accumulate on specific types of activities ranging from household work to professional mountain-climbing.

Course	Description & Max load (kg)	
Cooking&Dining	• This course removes food spills and cooking stains efficiently.	4
Gardening	• This course removes grass and mud/dirt stains and cleans sweat and skin oils efficiently.	4
Active Sports	• This course removes grass, soil, mud, light food stains, sweat, and make-up efficiently. • Do not use this course for waterproof clothing. This may result in damage to the waterproof or breathable capabilities.	4
Active Kids	• The Active Kids course is for most children's clothing. This course removes food, fruit juice, drinks, mud, soil, ink, and crayon stains efficiently.	4
Working&Everyday	• The Working&Everyday course is for lightly soiled clothing. This course removes light ink and pencil stains and cleans normal day to day stains efficiently.	4
Hygiene Care	• This course removes skin oils and blood stains efficiently.	4

Untitled-36 30 2015-01-26 2:57:21

Options

Available options differ depending on the course. Inactive options for a specific course are greyed out.

Options	Description
Quick Wash	• Specific for less soiled garments for loads less than 2 kg. • It takes a minimum of about 15 minutes, depending on the conditions such as the water pressure, water hardness, and/or extra options selected. • The Quick Wash time increases in this sequence: Off > 15 min > 20 min > 30 min > 40 min > 50 min > 60 min. • A recommended amount of detergent is less than 20 g (for a 2 kg load).
Pre Wash	• This will add a preliminary washing cycle before the main wash cycle.
Soaking+	• This option effectively removes stains by soaking the laundry. • Each soak cycle tumbles the drum for 1 minute and stands still for 4 minutes. You can set the Soaking+ time between 30 minutes and 150 minutes.
Intensive	• For badly soiled laundry. The operation time for each cycle is longer than normal.
Easy Iron	• The spinning speed decreases to reduce wrinkles. • Set the spinning speed up to 800 rpm.
Delay End	• The displayed time refers to the end time of a selected course.

Untitled-36 31 2015-01-26 2:57:21

Delay End

You can set the washing machine to finish the current course at a specific hours later.

This is useful if you want to finish the wash by the time you come home from business.

1. Select a course. Then change the course settings if necessary.
2. Tap the **Options** icon at the bottom right corner.
   Then, select options and change the option settings.
3. Tap **Delay End**.
4. Use the arrows to set the end time of the current course, and tap **Start**.

• To cancel the option, tap **Cancel** and return to the Options screen.

Use case

You want to finish a two-hour course 3 hours later from now. For this, you add the Delay End option to the current course with the 3-hour setting, and press the Start/Pause button at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m. Provided below is the time line for this example.

Untitled-36 32
2015-01-26 2:57:21

Settings

Child Lock

To prevent accidents by children or infants, Child Lock locks all buttons except for the **Settings** button.

You can access the Child Lock menu from the Settings screen or the Quick panel bar.

- To set the Child Lock, tap **Settings**, and tap the **Child Lock** button.
- To activate Child Lock, press and hold the **Activate** button for 3 seconds.
- To deactivate Child Lock temporarily, press and hold the **Temporarily Deactivate** button for 3 seconds.
- To deactivate Child Lock completely, press and hold the **Deactivate** button for 3 seconds.

- To add detergent or more laundry in the drum, or to change the course settings in the Child Lock state, you must first stop or release the Child Lock.
- The Child Lock will be reactivated one minute after it stops temporarily

Drum Light

- To turn the Drum Light on or off, tap **Settings**, and slide the **Drum Light** bar to **On** or **Off**.
- The drum light turns off automatically after 5 minutes.

Auto Dispense

The washing machine provides a two-compartment dispenser: one for detergent, and the other for fabric softener. The Auto Dispense unit dispenses an appropriate amount of detergent and fabric softener into the drum according to the course and cycle.

To enable the Auto Dispense

1. Tap **Settings** > **Auto Dispense**.
2. Slide the **Auto Detergent** bar to **On**, and set the **Amount** and the **Water Hardness**.
3. Slide the **Auto Softener** bar to **On**, and set the **Amount** and the **Concentration**.
4. Tap **Save**.

Brightness

Set the brightness of LCD screen

- Tap **Settings**, and tap the (-/+) signs to increase or decrease the brightness level.

Sound Theme

Set the volume level and beep melody.

1. Tap **Settings** > **Sound Theme**.
2. To adjust the volume, tap the (-/+) signs to increase or decrease the volume level.
3. To select a beep melody, tap a theme in the list.

Untitled-36 33 2015-01-26 2:57:21

Date & Time

The default time is set to the 12-hour format.

1. Tap **Settings** > **Date & Time**.
2. Tap the arrows to change the time for each time element. For example, to change the date, use the arrows above and below the date element.
3. To switch between the **AM** and **PM** elements, simply tap the corresponding element.
4. Tap **Save**.

Language

Select a preferred menu language.

- Tap **Settings** > **Language**, and select a preferred menu language.

Network

Auto setup

The washing machine supports Wi-Fi protocols of WEP, TKIP, and AES, but it does not come with a router (AP).

1. Tap **Settings** > **Network**, and then slide the **Network** bar to **On**. The AP list appears.
2. Tap a network provider, and provide a password if asked.
3. Tap **OK**. When completed successfully, the selected network provider is ticked.

Manual setup

1. Enable Wi-Fi connection as instructed above.
2. Tap **Set IP** > **Manual**.
3. Provide an IP Address, Subnet mask, Gateway, and DNS, and then tap **OK**.

Wi-Fi connection

Once the network connection is established, the next time you want to turn the Wi-Fi connection on or off, slide the **Network** bar to **On** or **Off**.

Easy Connection

Easy Connection enables you to easily configure the network settings including the authentication procedure.

Untitled-36 34 2015-01-26 2:57:21

Smart control

With Smart Control, you can control the washing machine on your mobile device. Tap this icon to turn the Smart control function on or off.

1. Tap **Settings** > Slide the **Smart Control** bar to **On**.
2. Back on the main screen, Smart Control activated.
3. Tap **Deactivate** to disable the function, Smart Control deactivated.

- The icon is greyed out if Smart Control is not activated.
- Manipulation such as icon tapping or button pressing on the washing machine will deactivate Smart Control.
- If wireless network not connected, Smart Control is not available.
- Select a connection method to external devices when tapping Smart Control.

Eco Check

The energy/water efficiency of the recent 4 courses is displayed with a technical summary of power consumption, water levels, course settings, and options.

1. Tap **Settings** > **Eco Check**. A summary screen of the recent 4 courses appears.
2. Tap a course to display a technical summary of the selected course.

Self Check

The washing machine performs self-diagnosis on the current system. Operation errors and machine problems can be found on the results screen.

- Tap **Settings** > **Self Check** > **Start**.

Calibration

Calibration ensures accurate weight detection by the washing machine. Make sure the drum is empty before running Calibration.

1. Tap **Settings** > **Calibration** > **Start**.
   - The door will be locked during the operation.
   - The drum keeps rotating clockwise and anticlockwise for several minutes.
2. When complete, the washing machine turns off automatically.

Untitled-36 35 2015-01-26 2:57:21

Update

When updates are available, the update notification appears on the screen.

To check the current firmware version

1. Tap **Settings** > **Update** to display the current firmware version.
2. To update the firmware manually, tap **Update**.

To update the firmware automatically

1. Tap **Auto Update** on the **Settings** screen.
2. Slide the **Auto Update** bar to **On**. The update proceeds without notification when updates are available.

WARNING

Do not unplug the power cable of the washing machine or the router during the update.

Help

Refer to the user guide for product usage, and check the troubleshooting section against a problem.

- Tap **Settings** > **Help**.

Untitled-36 36 2015-01-26 2:57:21

Samsung Mobile Smart Control

This washer provides two different mobile control apps that you can use for controlling your washer via a network connection.

Mobile apps that apply to the Smart Control feature of Samsung smart washers

Samsung Smart Home

With the newly designed Samsung Smart Home app, you can access your washer on the move, and control or check the operation status of your washer.

Download the "**Samsung Smart Home**" app from Play Store or Apple Store, and install on your mobile device.

Samsung Smart Washer

The Samsung Smart Washer app lets you control the operation of the washer on your mobile device in two categories: Indoor and Outdoor.

Download the "**Samsung Smart Washer**" app from Play Store or Apple Store, and install on your mobile device.

Smart Control settings on the washer

To enable the Smart Control feature, choose a connection method to the mobile app.

Tap the Setup icon, and select Smart Control under the Network menu.

1. Choose a connection method to the mobile app.

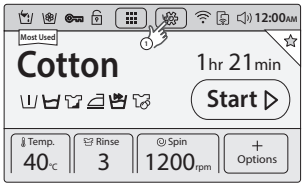

2. Select "Samsung Smart Home" if you want to control the washer through the Samsung integrated app.
   Select "Samsung Smart Washer" if you want to control the washer through the Samsung washer app.

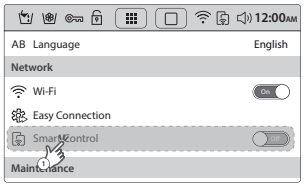

3. Once setup is complete, your changes are applied and you may need to reconnect.

- Samsung Smart Home (Default)
- Samsung Smart Washer

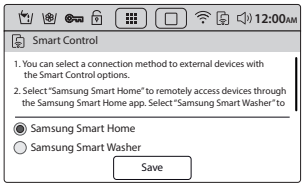

Untitled-36 37 2015-01-26 2:57:22

- By default, this product uses the newly designed Samsung Smart Home app as a connection method, which is recommended.
- For iPhone models, the Samsung Smart Home app is scheduled to be available at the Apple Store from the second half of 2014.
- In some countries, the Samsung Smart Home app may not be available. If this is the case, use the Samsung Smart Washer app instead.

Untitled-36 38 2015-01-26 2:57:22

Samsung Smart Home app

When using the Samsung Smart Home app, make sure "**Samsung Smart Home**" under the Setup menu is selected.

The Samsung Smart Home app enables you to access and control the washing machine on the move.

Installation

1. Visit Google Play Store for Android devices, or Apple App Store for iOS devices, and search for Samsung Smart Home to select.
2. Download and install the Samsung Smart Home app on your mobile device.

- The Samsung Smart Home app supports Android OS 4.0 (ICS) or later which is optimized for Samsung smartphones (Galaxy S and Galaxy Note series). Some functions of this app may work differently on other devices.
- This app supports iOS 7 or later for iPhone models.
- For enhanced performance, the UI design of this app is subject to change without notice.
- For iPhone models, this app is scheduled to be available from the latter half of 2014 at Apple App Store.

Preparation

1. To enable the app, you are required to enter your Samsung account. You will be guided in creating a Samsung account if you don't have one directly on the app. No other app is necessary for this purpose.
2. To enable the app, first register your washing machine to the Samsung Smart Home service.
   1) Select the washing machine in the device list of the Samsung Smart Home app.
   2) Enter the necessary information about the wireless AP that you use for wireless connection.
   3) Follow the onscreen instructions to configure settings for the washing machine.
   4) On the washing machine, select **Settings** > **Easy Connection** to configure the network settings.
   5) When complete, you will see the washing machine icon on the app.

CAUTION

- Wi-Fi uncertified routers may fail to establish the connection.
- If installing the washing machine and the AP near microwave ovens or electric hairdryers, Smart Control may not function properly due to electric interference.
- The washing machine supports only the Wi-Fi 2.4Ghz protocols.
- The surrounding environment may affect the wireless network performance.

- If you run the app without being logged in, you will see the Account guidance screen. Once logged in, you can change your account settings in **Settings** > **Account**.
- Samsung smartphone users can automatically log into the app once registering their account in **Settings**.

Untitled-36 39 2015-01-26 2:57:22

Using the Samsung Smart Home app

Key features

- **Integrated control of Samsung smart appliances**
  Register your Samsung smart devices to the Samsung Smart Home service that you can leverage for easy access. Select the washing machine icon on the app to access the core features of the washing machine on the move.
- **Master key**
  The master key consists of 4 modes: Going out, Coming home, Good night, and Good morning.
- **Chat controls**
  Chat between smart devices and get the information to control the device.
- **Home monitoring**
  Use the built-in camera of your smart device to monitor the living room while on the move.
- **Customer support**
  Download the product manual or request for a service repair.

Some features of this service may not be available on the washing machine.

Samsung Smart Home Washing Machine app

Control and monitor the washing machine both home and on the move.

1. Register the washing machine to the Samsung Smart Home app.
2. To enable remote control, turn on Smart Control on the washing machine.
3. Select the washing machine icon on the mobile device and tap **Start**.

Samsung Smart Home

This product is a smart washing machine that supports the Samsung Smart Home service.
For more information, visit www.samsung.com.

Untitled-36 40 2015-01-26 2:57:22

Samsung Smart Washer app

When using the Samsung Smart Washer app, make sure "**Samsung Smart Washer**" under the Setup menu is selected.

The Samsung Smart Washer app allows you to control some functions of the washing machine on your mobile device.

Download

1. Search for Samsung Smart Washer at the Play Store or the Apple Store.
2. Download and install the app on the mobile device.
3. Run the Samsung Smart Washer app on your mobile device.

Connect to the washing machine

The washing machine must be connected to a Wi-Fi network.

Indoor control

To enable this mode, the mobile device must be connected to the same network as the washing machine.

1. On the mobile device, tap **Indoor control** to display a list of available washing machine models.
2. Tap the model name of a washing machine to connect, and then tap **OK**. The authentication window appears.
3. On the washing machine, tap **Settings**, and slide the **Smart Control** bar to **On**. The authentication procedure begins.

The authentication procedure is required just once for the first use.

Outdoor control

To enable this mode, the washing machine must be registered to the **Samsung Smart Appliance** site (www.samsungsmartappliance.com).

1. On the washing machine, tap **Settings**, and slide the **Smart Control** bar to **On**.
2. On the mobile device, tap **Outdoor control**, and provide the login credentials.
   A list of registered devices appears.
3. Tap a device that you want to control from the list. Now, a remote connection will be established automatically between the washing machine and the mobile device.

No authentication procedure is required.

Untitled-36 41 2015-01-26 2:57:22

Registration

Register your washing machine to the Samsung Smart Appliance site (www.samsungsmartappliance.com), and get remote access to the washing machine. The washing machine must be connected to a Wi-Fi network.

1. Go to the **Samsung Smart Appliance** website (www.samsungsmartappliance.com).
2. Provide your Samsung account credentials to log in. If not a registered user, click Create a Samsung account and follow the onscreen instructions.
3. Click **My Page** > **Add device**, and provide the MAC address of the washing machine.
   To check the MAC address, tap **Settings** > **Network** on the washing machine.
4. Click **Get Approval**.
5. Tap **Settings** on the washing machine, and tap **OK** if asked to get approval.
   Registered washing machines are found in the device list of the website.

Hereby, Samsung Electronics, declares that this washing machine is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The official Declaration of conformity may be found at http://www.samsung.com, go to Support > Search Product Support and enter the model name.

Untitled-36 42 2015-01-26 2:57:22

Maintenance

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Eco Drum Clean

Perform this course regularly to clean the drum and to remove bacteria from it.

1. Tap **Course** > **Eco Drum Clean**.
2. Move to the main screen, and tap **Start**.

The water temperature for Eco Drum Clean is set to 70 °C, which cannot be changed.

CAUTION

Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum deteriorates the washing performance.

Eco Drum Clean reminder

- The Eco Drum Clean reminder appears on the main screen once every 40 washes. It is advisable to perform the Eco Drum Clean regularly.
- When you first see this reminder, you can ignore the reminder (up to 6 times) by tapping **Remind later**. From the 7th wash, the reminder does not appear. However, it appears again on the second 40th wash.

Untitled-36 43 2015-01-26 2:57:22

Emergency drain

In case of a power failure, drain the water inside the drum before taking out the laundry.

1. Unplug the power cord of the washing machine from the main socket.
2. Gently press the top area of the filter cover to open.

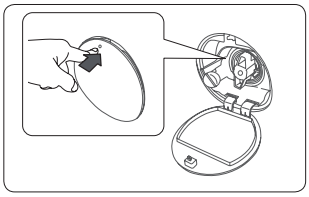

3. Gently pull out the emergency drain tube.

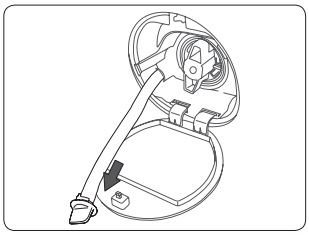

4. While holding the end of the drain tube, open the tube cap.

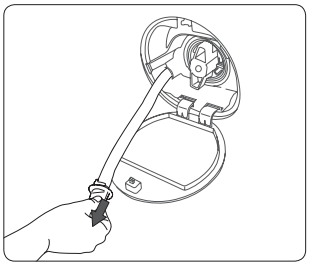

5. Let the water run into a container.
6. Close the tube cap, and reinsert the drain tube.
7. Close the filter cover.

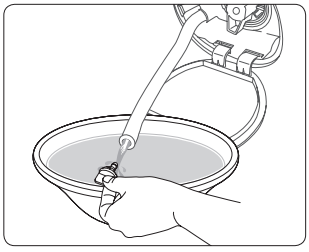

Untitled-36 44 2015-01-26 2:57:23

Cleaning

Surface of the washing machine

Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

Mesh filter

Clean the mesh filter of the water supply hose once or twice a year.

1. Turn off the washing machine, and unplug the power cord.
2. Close the water tap.
3. Loosen and disconnect the water supply hose from the back of the washing machine. Cover the hose with a cloth to prevent water from gushing out.

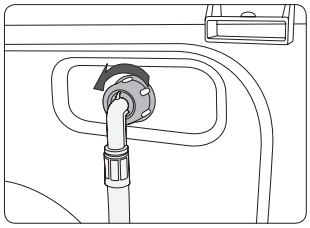

4. Use pliers to pull out the mesh filter from the inlet valve hole.
5. Submerge the mesh filter deeply in water so that the threaded connector is also submerged.
6. Dry the mesh filter completely in the shade.
7. Reinsert the mesh filter into the water supply hose, and place the water supply hose in the original position.
8. Open the water tap.

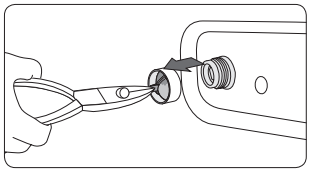

If the mesh filter is clogged, an error code of "**4E**" appears on the screen.

Untitled-36 45 2015-01-26 2:57:23

Debris filter

It is advisable to clean the debris filter 5 or 6 times a year to prevent its clogging. A clogged debris filter may reduce the bubble effect.

1. Turn off the washing machine, and unplug the power cord.
2. Drain the remaining water inside the drum by referring to "**Emergency drain**" on page **44**.
3. Open the filter cover using a coin or key.
4. Turn the debris filter cap to the left, and drain off the remaining water.
5. Remove the debris filter.

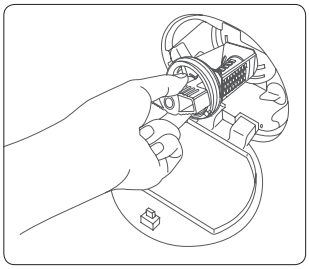

6. Clean the debris filter using soft brushes. Make sure the drain pump propeller inside the filter is unclogged.
7. Reinsert the debris filter, and turn the filter cap to the right.

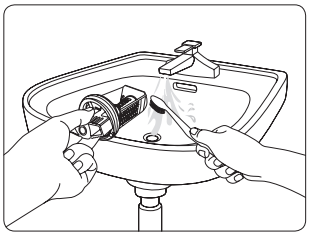

- To open the safety filter cap, push in and turn it anticlockwise. The spring of the cap helps to open the cap.
- To close the safety filter cap, turn it clockwise. The spring makes a rattling sound, which is normal.

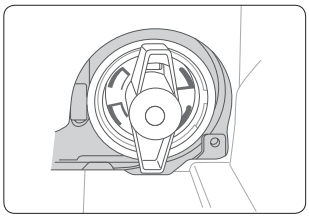

- If the debris filter is clogged, an error code of "**5E**" appears on the screen.

CAUTION

- Make sure the filter cap is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.

Untitled-36 46 2015-01-26 2:57:23

Auto Dispense unit

The Auto Dispense unit must be cleaned regularly to ensure proper operation at all times.

1. Remove the Auto Dispense unit from the washing machine.

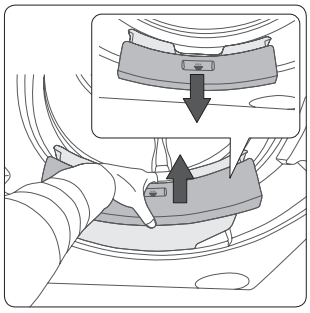

2. Wipe out the recess of the Auto Dispense unit using a dry cloth.

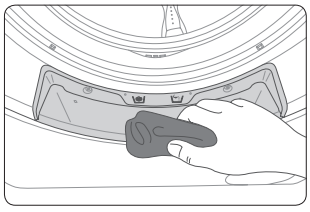

3. Remove two knobs of the Auto Dispense unit as well as the two caps at the bottom, and run water through the Auto Dispense unit to clean the inner area.

   Do not shake the Auto Dispense unit as you may be spattered with water from the vent of the Auto Dispense unit.
4. Reinsert knobs and caps in the original position.
5. Reinsert the Auto Dispense unit in the original position.

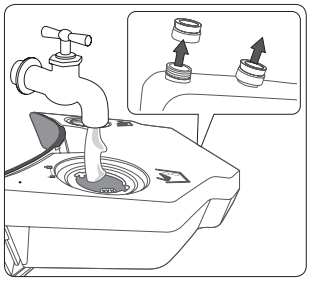

Untitled-36 47 2015-01-26 2:57:23

Recovery from freezing

The washing machine may freeze when it drops below 0 °C.

1. Turn off the washing machine, and unplug the power cord.
2. Pour warm water over the water tap to loosen the water supply hose.
3. Disconnect the water supply hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water supply hose to the water tap.

If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time.

If this is the case, drain the washing machine and unplug the power cord.

1. On the main screen, tap **Course** > **Cotton** with an option of **Quick Wash**.
2. Empty the drum, and tap **Start**.
3. When the course is complete, close the water tap and disconnect the water supply hose.
4. Turn off the washing machine, and unplug the power cord.
5. Open the door to let air circulate through the drum.

Untitled-36 48 2015-01-26 2:57:23

Troubleshooting

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try the suggestions.

Problem	Action
The washing machine won't start.	• Make sure the washing machine is plugged in. • Make sure the door is properly closed. • Make sure the water tap is open. • Tap **Start** again on the main screen.
Water supply is insufficient, or no water is supplied.	• Open the water tap fully. • Make sure the water supply hose is not frozen. • Make sure the water supply hose is not kinked or clogged. • Clean the filter on the water supply hose.
The washing machine vibrates badly or makes noise.	• Make sure the washing machine is installed on a level floor. If the floor is not level, use the levelling feet to adjust the level. • Make sure that the shipping bolts are removed. • Make sure the washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/ or spin.	• Make sure the drain hose is straightened all the way to the drain system. • Make sure the debris filter is not clogged.
The door won't open.	• Tap **Start** to stop operating the washing machine. • The door remains locked during the heating cycle of the Sanitize course. • It may take several seconds to disengage the locking mechanism.
The washing machine produces lots of bubbles.	• Check if the Auto Detergent and Auto Softener settings are properly specified. • Make sure you use the recommended types of detergent as appropriate.
I cannot apply additional detergent.	• Check the remaining amount of detergent and fabric softener to see if they are already up to the limit. • Make sure the Auto Dispense function is enabled, with both the Water Hardness and Concentration settings properly specified.

If a problem persists, contact a local Samsung service centre.

Untitled-36 49 2015-01-26 2:57:24

Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

Problem	Action
DE	• Make sure the door is properly closed. • Make sure laundry is not caught in the door.
4E	• Make sure the water tap is open. • Make sure the washing machine is operating with sufficient water pressure, • Clean the mesh filter as it may be clogged.
5E	• Clean the debris filter as it may be clogged. • Make sure the drain hose is not kinked all the way to the drain system. • Clean the mesh filter as it may be clogged.
UE	• The laundry load is unbalanced. Spread the laundry evenly.
CE/3E/UC	• This is not user-repairable. Contact a local Samsung service centre.

If any information code keeps appearing on the screen, contact a local Samsung service centre.

Untitled-36 50 2015-01-26 2:57:24

Specifications

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturer's instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

Untitled-36 51 2015-01-26 2:57:24

Fabric care chart

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material		Do not iron
	Delicate fabric		Can be dry cleaned using any solvent
	Item can be washed at 95 ˚C		Dry Clean
	Item can be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item can be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item can be washed at 30 ˚C		Do not dry clean
	Hand wash only		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry
	Can be ironed at 100 ˚C max		

Untitled-36 52 2015-01-26 2:57:25

Specification sheet

TYPE			FRONT LOADING WASHING MACHINE
MODEL NAME			WW10H9*****
DIMENSIONS			W600xD600xH850(mm)
WATER PRESSURE			50 kPa ~ 800 kPa
WATER VOLUME			68 ℓ
NET WEIGHT			87 kg
WASH AND SPIN CAPACITY			10.0 kg
POWER CONSUMPTION	WASHING	220 V	150 W
		240 V	150 W
	WASHING AND HEATING	220 V	2000 W
		240 V	2300 W
	SPIN	220~240 V	700 W
	PUMPING		30 W
SPIN REVOLUTIONS		rpm	1600

Untitled-36 53 2015-01-26 2:57:25

Memo

Memo

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
VIETNAM	1800 588 889	www.samsung.com/vn/support

DC68-03377G-01

WW10H9*****
WW90H9*****

Máy giặt

Hướng dẫn sử dụng

Hãy nghĩ đến những khả năng có thể sẽ xảy ra

Cám ơn bạn đã mua sản phẩm Samsung này.

Samsung Smart Home

SAMSUNG

Untitled-37 1 2015-01-26 2:59:05

Content

Thông tin an toàn 3

Bạn cần phải biết những gì về hướng dẫn an toàn. . . . 3
Các biểu tượng an toàn quan trọng 3
Các biện pháp phòng ngừa quan trọng về an toàn. . . . 4

Lắp đặt 11

Bao gồm 11
Yêu cầu lắp đặt 12
Lắp đặt theo từng bước 14

Trước khi bắt đầu 18

Thiết lập ban đầu 18
Hướng dẫn giặt quần áo 20
Hướng dẫn sử dụng bột giặt. . . . 22

Vận hành 25

Màn hình 25
Các bước đơn giản để bắt đầu 28
Tổng quan chế độ 29
Setting (cài đặt) 33
Điều khiển Thông minh trên Di động của Samsung 37
Ứng dụng Samsung Smart Home. . . . 39
Ứng dụng Samsung smart washer app 41

Bảo trì 43

Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường) 43
Xả nước khẩn cấp. . . . 44
Vệ sinh 45
Rã đông. . . . 48
Bảo trì sau một thời gian dài không sử dụng. . . . 48

Xử lý sự cố 49

Các điểm kiểm tra 49
Mã thông tin 50

Thông số kỹ thuật 51

Bảo vệ môi trường 51
Biểu đồ các loại vải 52
Bảng thông số kỹ thuật 53

Untitled-37 2 2015-01-26 2:59:05

Thông tin an toàn

Chúc mừng bạn sở hữu máy giặt mới của Samsung. Hướng dẫn sử dụng này bao gồm các thông tin quan trọng về cách lắp đặt, sử dụng và bảo quản thiết bị của bạn. Vui lòng dành thời gian đọc kỹ hướng dẫn sử dụng để tận dụng được hết các lợi ích và tính năng của máy giặt.

Bạn cần phải biết những gì về hướng dẫn an toàn.

Vui lòng đọc kỹ hướng dẫn sử dụng này để đảm bảo rằng bạn biết cách vận hành an toàn và hiệu quả các chức năng, tính năng tối ưu của thiết bị. Vui lòng bảo quản sách hướng dẫn sử dụng ở địa phương an toàn gần với thiết bị, để tham khảo khi cần. Chỉ sử dụng thiết bị cho các mục đích được nêu trong hướng dẫn sử dụng.

Các cảnh báo và hướng dẫn an toàn quan trọng trong hướng dẫn sử dụng này không bao gồm hết tất cả các điều kiện và tình huống có thể xảy ra. Bạn cần phải suy nghĩ thực tế, cẩn trọng và cẩn thận khi cài đặt, bảo trì và vận hành máy giặt.

Do các hướng dẫn vận hành dưới đây là cho nhiều dòng máy, nên đặc tính kỹ thuật máy giặt của bạn có thể khác biệt đôi chút so với mô tả trong sách và có thể không áp dụng hết tất cả các ký hiệu cảnh báo. Nếu bạn có bất kỳ câu hỏi hoặc mối quan tâm nào, vui lòng liên hệ tới trung tâm dịch vụ gần nhất hoặc tìm thông tin hoặc trợ giúp trực tuyến trên trang www.samsung.com.

Các biểu tượng an toàn quan trọng

Ý nghĩa các biểu tượng và ký hiệu trong hướng dẫn sử dụng:

⚠	**CẢNH BÁO**: Các thao tác vận hành nguy hiểm hoặc không an toàn có thể dẫn đến **chấn thương nghiêm trọng, tử vong và/hoặc hư hỏng sản phẩm**.
⚠	**LƯU Ý**: Các thao tác vận hành nguy hiểm hoặc không an toàn có thể dẫn đến **chấn thương và/hoặc hư hỏng sản phẩm**.
	CHÚ Ý

Các ký hiệu cảnh báo này có thể giúp ngăn ngừa chấn thương cho chính bạn và những người khác.

Vui lòng tuân thủ tuyệt đối các ký hiệu trên.

Sau khi đọc kỹ hướng dẫn sử dụng, bảo quản nó ở nơi an toàn để tham khảo khi cần.

Đọc tất cả các hướng dẫn trước khi sử dụng thiết bị.

Với dụng cụ có sử dụng nguồn điện và các bộ phận chuyển động bất kỳ, luôn tiềm ẩn các nguy cơ. Để vận hành thiết bị một cách an toàn, hãy tự làm quen với việc vận hành và thận trọng khi sử dụng thiết bị.

Untitled-37 3 2015-01-26 2:59:06

Các biện pháp phòng ngừa quan trọng về an toàn

⚠ CẢNH BÁO: Để giảm thiểu nguy cơ cháy nổ, điện giật hoặc chấn thương khi sử dụng thiết bị, vui lòng tuân thủ các lưu ý căn bản sau đây:

Không để trẻ em (hoặc vật nuôi) chơi trong hoặc trên máy giặt. Cửa máy giặt mở từ phía trong rất khó và có thể gây chấn thương cho trẻ em nếu bị kẹt bên trong.

Các cá nhân (kể cả trẻ em) nếu có khuyết tật, vấn đề về tâm lý hoặc không đủ khả năng nhận thức, thiếu kỹ năng và kinh nghiệm không được sử dụng thiết bị, trừ khi họ được giám sát và hướng dẫn sử dụng thiết bị bởi người chịu trách nhiệm về an toàn cho họ.

Cần giám sát trẻ em để đảm bảo rằng trẻ không dùng thiết bị để chơi.

Sử dụng tại khu vực châu Âu: Trẻ em từ 8 tuổi trở lên và người khuyết tật, có vấn đề về tâm lý hoặc không đủ khả năng nhận thức, thiếu kỹ năng và kinh nghiệm được sử dụng thiết bị nếu họ được giám sát và hướng dẫn sử dụng thiết bị một cách an toàn và hiểu các nguy cơ có thể xảy ra. Trẻ em không được chơi với thiết bị. Trẻ em không được phép lau chùi hoặc bảo trì thiết bị mà không có sự giám sát.

Nếu dây nguồn bị hỏng, chúng phải được thay thế bởi nhà sản xuất, nhân viên dịch vụ hoặc các cá nhân có trách nhiệm tương đương để tránh xảy ra nguy cơ.

Thiết bị nên đặt ở vị trí thuận tiện với ổ cắm điện, vòi nước và ống xả.

Với các thiết bị có lỗ thoáng ở gầm, thảm phải đảm bảo không chắn mất lỗ thoáng.

Một bộ ống nước sẽ được cung cấp kèm theo thiết bị để sử dụng và bạn không nên sử dụng lại bộ ống cũ.

Untitled-37 4 2015-01-26 2:59:06

LƯU Ý: Để tránh nguy cơ do thiết lập lại cầu chì nhiệt sai quy cách, thiết bị sẽ không được cấp điện thông qua một thiết bị chuyển mạch ngoại vi, chẳng hạn như một thiết bị hẹn giờ, hoặc kết nối với mạch điện thường xuyên được bật và tắt các tiện ích.

⚠ CẢNH BÁO: CẢNH BÁO về lắp đặt đúng cách

Lắp đặt thiết bị phải được tiến hành bởi nhân viên kỹ thuật hoặc nhân viên dịch vụ của công ty.

- Các sai sót có thể dẫn đến điện giật, cháy, nổ, các vấn đề với sản phẩm hoặc gây chấn thương.

Thiết bị khá nặng nên cần cẩn trọng khi nâng.

Cắm các dây điện đến ổ điện AC 220 - 240 V / 50 Hz trên tường hoặc cao hơn và chỉ sử dụng ổ cắm này cho thiết bị. Không sử dụng dây nối.

- Dùng chung ổ điện với các thiết bị khác sử dụng chung nguồn hoặc nối dây có thể gây ra điện giật hoặc cháy nổ.
- Đảm bảo hiệu điện thế, tần số và các điều kiện hiện tại tương thích với tiêu chuẩn kỹ thuật của thiết bị. Các sai sót có thể gây ra điện giật hoặc cháy nổ. Cắm sát phích cắm vào ổ điện trên tường.

Sử dụng một miếng vải khô và làm sạch các tạp chất như bụi hoặc nước ở các phích và ổ cắm điện thường xuyên.

- Tháo phích cắm nguồn và làm sạch bằng một miếng vải khô.
- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Cắm phích vào ổ điện trên tường sao cho dây điện nằm trên sàn nhà.

- Nếu bạn cắm phich vào ổ ở hướng đối diện, dây cáp dẫn điện có thể hỏng và điều này có thể dẫn đến điện giật hoặc cháy nổ.

Bao bì sản phẩm phải ở ngoài tầm tay trẻ em vì chúng có thể gây nguy hiểm.

- Nếu trẻ nhỏ trùm kín bao lên đầu, bao có thể gây nghẹt thở.

Liên hệ với trung tâm dịch vụ gần nhất trong trường hợp thiết bị, phích cắm hoặc dây điện bị hỏng.

Thiết bị phải được đặt hoàn toàn trên mặt đất.

Không được đặt thiết bị trên ống dẫn ga, ống nước hoặc đường dây điện thoại.

- Các sai sót có thể dẫn đến điện giật, cháy, nổ hoặc các vấn đề với sản phẩm.
- Không bao giờ cắm dây điện vào ổ cắm không nằm trên mặt đất và đảm bảo ổ cắm phù hợp với các quy định của địa phương và quốc gia.

Không lắp thiết bị gần các nguyên liệu dẫn nhiệt hoặc dễ cháy nổ.

Không lắp thiết bị ở nơi ẩm ướt hoặc bụi bặm, hoặc dưới ánh nắng trực tiếp của mặt trời hoặc nước (mưa).

Không lắp thiết bị ở môi trường có nhiệt độ thấp.

- Sương giá có thể gây nổ ống.

Untitled-37 5 2015-01-26 2:59:06

Không lắp thiết bị ở môi trường có thể rò rỉ ga.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Không sử dụng máy biến áp.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Không sử dụng phích cắm, dây điện hoặc ổ cắm hỏng.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Không kéo hoặc cuộn dây điện.

Không xoắn hoặc thắt dây điện.

Không treo dây điện trên một vật bằng kim loại, đặt một vật nặng trên dây điện, nhét dây điện giữa các đồ vật khác hoặc ném dây vào phía sau thiết bị.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Không kéo dây khi rút phích cắm.

- Rút phích ra bằng cách nắm giữ phích cắm.
- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

⚠ LƯU Ý: LƯU Ý khi lắp đặt

Thiết bị nên đặt ở vị trí thuận tiện nơi phích cắm điện có thể dễ dàng tiếp cận.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ do rò rỉ điện.

Lắp đặt thiết bị trên mặt sàn cứng và bằng phẳng để chịu được sức nặng của thiết bị.

- Các sai sót có thể dẫn đến các rung động, chấn động, tiếng ồn bất thường hoặc các vấn đề với sản phẩm.

⚠ CẢNH BÁO: CẢNH BÁO về sử dụng đúng cách

Nếu thiết bị bị ngập nước, tắt nguồn cung cấp nước và năng lượng ngay lập tức và liên hệ với trung tâm dịch vụ gần nhất.

- Không chạm vào phích cắm điện bằng tay ướt.
- Các sai sót có thể gây ra điện giật.

Nếu thiết bị tạo ra tiếng động lạ, có mùi cháy, hoặc có khói, rút phích cắm ra ngay lập tức và liên hệ với trung tâm dịch vụ gần nhất.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Trong trường hợp rò rỉ khí (như khí propan, LP, v.v.),lập tức thông thoáng khí mà không cần chạm vào phích cắm điện. Không chạm vào thiết bị hoặc dây điện. Không chạm vào thiết bị hoặc dây điện.

- Không sử dụng quạt thông gió.
- Tia lửa điện có thể dẫn đến cháy, nổ.

Không để trẻ em chơi trong hoặc trên máy giặt. Ngoài ra, khi sắp xếp thiết bị, tháo tay nắm cửa máy giặt.

- Nếu bị kẹt bên trong sản phẩm, trẻ em có thể bị nghẹt thở dẫn đến tử vong.

Untitled-37 6 2015-01-26 2:59:06

Hãy chắc chắn đã gỡ bỏ các bao bì (miếng bọt biển, xốp) gắn ở phía dưới của máy giặt trước khi sử dụng.

Không giặt các vật dụng có dính dầu hỏa, benzen, chất pha loãng sơn, chất cồn hoặc các chất dễ cháy, nổ khác.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Không dùng lực mở cửa máy giặt trong khi máy đang hoạt động (giặt/sấy/quay ở nhiệt độ cao).

- Nước chảy ra khỏi máy giặt có thể gây bỏng hoặc làm sàn nhà trơn trợt. Có thể dẫn đến chấn thương.
- Dùng lực mở cửa máy giặt có thể gây hư hỏng cho sản phẩm hoặc gây chấn thương.

Không đặt tay dưới máy giặt khi máy đang vận hành.

- Có thể dẫn đến chấn thương.

Không chạm vào phích cắm điện bằng tay ướt.

- Các sai sót có thể gây ra điện giật.

Không tắt thiết bị bằng cách rút phích cắm điện trong khi máy đang chạy.

- Cắm phích cắm vào ổ điện lần nữa có thể tạo ra tia lửa điện và dẫn đến điện giật hoặc cháy.

Không để trẻ em hoặc người ốm sử dụng máy giặt mà không có sự giám sát thích hợp. Không để trẻ em leo vào hoặc leo lên trên máy giặt.

- Các sai sót có thể gây ra điện giật, bỏng hoặc cháy nổ.

Không chèn tay hoặc vật kim loại dưới máy giặt trong khi máy đang hoạt động.

- Có thể dẫn đến chấn thương.

Không rút phích cắm điện bằng cách kéo dây điện. Luôn giữ phích cắm và kéo ra theo phương thẳng.

- Dây bị hư hỏng có thể gây ngắt mạch, cháy và/hoặc điện giật.

Không tự mình sửa chữa, thay phụ tùng hoặc chỉnh sửa thiết bị.

- Không sử dụng cầu chì (như đồng, dây thép, v.v.) thay cho cầu chì đúng tiêu chuẩn.
- Khi thiết bị cần được sửa chữa hoặc cài đặt lại, liên hệ với trung tâm dịch vụ gần bạn nhất.
- Các sai sót có thể dẫn đến điện giật, cháy, các vấn đề với sản phẩm hoặc gây chấn thương.

Nếu ống cấp nước bị lỏng tại ngay khóa nước và gây ngập cho thiết bị, hãy rút phích cắm ra.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Rút phích cắm ra khi không sử dụng thiết bị trong thời gian dài hoặc trong khoảng thời gian có bão hoặc sấm chớp.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Nếu có vật lạ rơi vào thiết bị, rút phích cắm điện và liên lạc với trung tâm dịch vụ khách hàng gần nhất của Samsung.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Untitled-37 7 2015-01-26 2:59:06

⚠ LƯU Ý: LƯU Ý khi sử dụng

Khi máy giặt bị nhiễm bẩn do các tạp chất như chất tẩy, bụi bẩn, chất thải thực phẩm, v.v., hãy rút phích cắm ra và làm sạch máy giặt bằng miếng vải ẩm và mềmv.

- Các sai sót có thể gây ra sự đổi màu, biến dạng, hư hỏng hay rỉ sét.

Sự tác động mạnh có thể làm vỡ kính phía trước. Hãy cẩn thận khi sử dụng máy giặt.

- Nếu kính bị bể, nó có thể gây chấn thương cho bạn.

Sau khi nguồn nước bị hỏng hoặc khi nối lại ống cấp nước, vui lòng mở vòi nước một cách chậm rãi.

Sau một thời gian không sử dụng, nên mở vòi nước một cách chậm rãi.

- Áp lực nước trong ống cấp nước hoặc ống nước có thể làm hư hỏng một phần sản phẩm hoặc rò rỉ nước.

Nếu hiện tượng xả nước xảy ra trong khi máy đang hoạt động, kiểm tra xem có vấn đề về xả nước hay không.

- Nếu sử dụng máy giặt khi máy bị ngập nước do vấn đề đường xả, điều này có thể dẫn đến điện giật hoặc cháy.

Nhét quần áo hoàn toàn vào máy giặt để quần áo không tràn ra ngoài cửa máy giặt.

- Nếu quần áo bị kẹt ở cửa máy giặt, điều này có thể gây ra hư hỏng cho quần áo hoặc máy giặt hoặc gây rò rỉ nước.

Vặn chặt vòi nước nếu không sử dụng máy giặt.

Đảm bảo các ốc vít của đầu nối ống cấp nước được vặn chặt.

- Các sai sót có thể gây ra hư hỏng tài sản hoặc chấn thương.

Đảm bảo rằng vòng cao su và kính phía trước cửa không bị nhiễm bẩn bởi các tạp chất (ví dụ như chất thải, sợi, tóc, v.v.).

- Nếu tạp chất dính ở cửa hoặc cửa không đóng hoàn toàn, có thể gây rò rỉ nước.

Mở vòi nước và kiểm tra xem các đầu nối ống cấp nước có được xiết chặt không và chắc chắc rằng không có hiện tượng rò rỉ nước trước khi sử dụng sản phẩm.

- Nếu các ốc vít trên đầu nối ống cấp nước bị lỏng, có thể gây ra rò rỉ nước.

Sản phẩm của bạn được thiết kế cho thị trường trong nước.

Sử dụng sản phẩm cho mục đích kinh doanh là sử dụng sai mục đích. Trong trường hợp này, sản phẩm sẽ không được bảo hành theo tiêu chuẩn của Samsung và Samsung không chịu trách nhiệm về các trục trặc hoặc thiệt hại do sử dụng sai mục đích.

Không đứng hoặc đặt các vật thể (như quần áo, nến đang cháy, thuốc lá, thức ăn, hóa chất, các vật kim loại, v.v.) lên trên thiết bị.

- Các sai sót có thể dẫn đến điện giật, cháy, các vấn đề với sản phẩm hoặc gây chấn thương.

Không phun vật chất dễ bay hơi như thuốc trừ sâu lên bề mặt của thiết bị.

- Cũng như các chất có hại đối với con người, vì chúng có thể dẫn đến bị điện giật, cháy nổ hoặc các vấn đề với sản phẩm.

Không đặt các vật tạo ra điện trường gần máy giặt.

- Điều này có thể dẫn đến thương tích do trục trặc máy giặt.

Untitled-37 8 2015-01-26 2:59:06

Nước xả ra trong chế độ giặt nhiệt độ cao hoặc sấy khô có thể nóng. Không nên chạm vào nước.

- Các sai sót có thể gây ra bỏng hoặc chấn thương.

Không rửa, quay, hoặc sấy khô các ghế, thảm, hoặc quần áo không thấm nước (*) trừ khi thiết bị của bạn có một chu trình đặc biệt để làm sạch các vật dụng này.

(*): Bộ ga trải giường bằng len, áo mưa, quần áo đi câu, đi trượt tuyết, túi ngủ, chăn tã, quần hút mồ hôi, và bao trùm xe đạp, xe máy và xe hơi v.v.

- Không giặt thảm dày hoặc cứng ngay cả khi các ký hiệu giặt tẩy trên nhãn có ghi cẩn trọng. Điều này có thể dẫn đến chấn thương hoặc hư hỏng cho máy giặt, tường, sàn, hoặc quần áo bởi các rung động bất thường.
- Không giặt thảm trải sàn và thảm chùi chân có lớp đệm cao su. Đệm cao su có thể rơi ra và dính vào bên trong lồng giặt, và có thể dẫn đến sự cố khi thoát nước.

Không vận hành máy giặt khi tháo ngăn kéo chất tẩy.

- Điều này có thể dẫn đến điện giật hoặc chấn thương do rò rỉ nước.

Không chạm vào bên trong lồng giặt trong hoặc ngay sau khi sấy vì nó còn nóng.

- Điều này có thể dẫn đến bỏng.

Không đặt tay vào ngăn chứa chất tẩy.

- Có thể dẫn đến chấn thương do tay bạn có thể bị kẹt trong thiết bị nhập chất tẩy.

Không đặt các vật thể (như giày dép, chất thải thực phẩm, động vật) ngoại trừ quần áo vào máy giặt.

- Có thể gây hư hỏng cho máy giặt, hoặc chấn thương hay tử vong cho thú nuôi do các rung động bất thường.

Không sử dụng các vật sắc nhọn như đinh ghim, dao, móng tay, v.v. để nhấn nút.

- Các sai sót có thể gây ra điện giật hoặc chấn thương.

Không giặt quần áo bị dính dầu, kem hoặc kem dưỡng ẩm thường được tìm thấy trong các cửa hàng chăm sóc da hoặc trị liệu massage.

- Chúng có thể khiến vòng cao su bị biến dạng và rò rỉ nước.

Không để các vật kim loại như kim băng, kẹp tóc hay chất tẩy trắng trong lồng giặt trong một thời gian dài.

- Có thể gây rỉ sét lồng giặt.
- Nếu rỉ sét bắt đầu xuất hiện trên bề mặt của lồng giặt, sử dụng chất làm sạch (trung tính) bôi lên bề mặt và dùng một miếng bọt biển để làm sạch nó. Không bao giờ sử dụng bàn chải kim loại.

Không sử dụng chất tẩy khô trực tiếp và không giặt, rửa, hoặc quay các quần áo bị dính chất tẩy khô.

- Điều này có thể dẫn đến việc tự bốc cháy hoặc cháy do nhiệt từ quá trình oxy hóa của dầu.

Không sử dụng nước từ các thiết bị làm mát/sưởi ấm.

- Điều này có thể gây trục trặc cho thiết bị.

Không sử dụng xà bông giặt tay tự nhiên cho máy giặt.

- Nếu xà bông cứng lại và tích tụ bên trong máy giặt, có thể gây ra vấn đề với sản phẩm, đổi màu, rỉ sét, hoặc bốc mùi hôi thối.

Untitled-37 9 2015-01-26 2:59:06

Đặt vớ và áo nịt ngực vào túi lưới giặt và giặt chung với quần áo.

Không giặt một lượng quần áo lớn như bộ trải giường trong lưới giặt

- Các sai sót có thể gây ra chất thương do rung động bất thường.

Không sử dụng chất tẩy cứng.

- Nếu chúng tích tụ bên trong máy giặt, có thể dẫn đến rò rỉ nước.

Hãy chắc chắn các túi quần túi áo khi được giặt phải hoàn toàn trống.

- Các vật cứng, sắc nhọn như tiền xu, chốt an toàn, đinh, ốc vít hoặc đá có thể gây hư hỏng nặng cho thiết bị.

Không giặt quần áo với khóa lớn, các nút hoặc các vật kim loại nặng khác.

Sắp xếp quần áo theo màu sắc trên cơ sở độ bền của màu và chọn chu trình giặt theo đề nghị, nhiệt độ nước và các chức năng bổ sung.

- Các sai sót có thể làm phai màu hoặc hỏng chất liệu vải.

Cẩn thận tránh cho ngón tay của trẻ bị kẹt vào cửa khi bạn đóng máy.

- Các sai sót có thể gây ra chấn thương.

⚠ CẢNH BÁO: CẢNH BÁO về làm sạch thiết bị đúng cách

Không làm sạch bằng cách phun trực tiếp nước vào thiết bị.

Không sử dụng các chất tẩy có tính axit mạnh.

Không sử dụng benzen, chất pha loãng hoặc chất cồn để làm sạch thiết bị.

- Các sai sót có thể gây ra đổi màu, biến dạng, hư hỏng, điện giật hoặc cháy.

Trước khi làm sạch hoặc thực hiện bảo trì, ngắt nguồn điện của thiết bị.

- Các sai sót có thể gây ra điện giật hoặc cháy nổ.

Untitled-37 10 2015-01-26 2:59:06

Lắp đặt

Thực hiện theo các hướng dẫn một cách cẩn trọng để đảm bảo lắp đặt máy giặt đúng cách và phòng ngừa tai nạn khi giặt đồ.

Bao gồm

Đảm bảo mọi bộ phận đều nằm trong bao bì sản phẩm. Nếu bạn gặp vấn đề với máy giặt hoặc các bộ phận của máy, vui lòng liên hệ với trung tâm khách hàng của Samsung tại địa phương hoặc nhà bán lẻ.

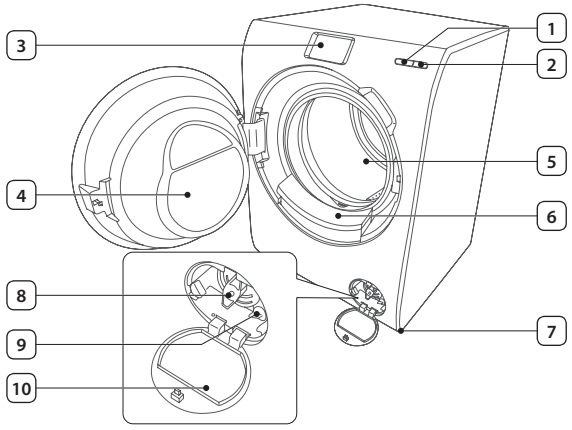

1	Nút bắt đầu
2	Nút nguồn
3	Màn hình điều khiển
4	Cửa
5	Lồng giặt
6	Bộ phận tự động rót bột giặt
7	Chân đế
8	Bộ lọc mảnh vỡ
9	Ống xả khẩn cấp
10	Nắp lọc

Cờ lê

Nắp bu lông



Đường ống dẫn

Ống cấp nước lạnh

Ống cấp nước nóng



Bộ sỏi giặt

Nắp bu lông : Kích cỡ (từ số 3 đến 6) tùy theo kiểu máy.
Ống cấp nước nóng: Tùy theo kiểu máy.
Bộ sỏi giặt: 200 ml và 100 ml (TỐI ĐA).

Untitled-37 11 2015-01-26 2:59:06

Yêu cầu lắp đặt

Nguồn điện và tiếp đất

- Cầu chì hoặc bộ ngắt mạch AC 220-240 V / 50 Hz nếu cần thiết
- Sử dụng một bộ mạch song song riêng lẻ cho máy giặt.

Để bảo đảm tiếp đất đúng cách, máy giặt cần đi kèm với một dây nguồn gồm có một phích cắm ba chấu để sử dụng trong lắp đặt và tiếp đất.

Kiểm tra với nhân viên điện lực hoặc nhân viên dịch vụ nếu bạn không chắc chắn về quy trình tiếp đất.

Không điều chỉnh phích cắm nguồn. Nếu đầu ra không khớp, vui lòng gọi cho nhân viên điện lực để lắp đặt đầu ra cho đúng cách.

⚠ CẢNH BÁO

- KHÔNG sử dụng dây nối.
- Chỉ sử dụng dây điện đi kèm với máy giặt.
- KHÔNG nối các dây nối đất cho các hệ thống ống nhựa, dẫn khí, hoặc ống dẫn nước nóng.
- Dây dẫn nối đất không đúng cách có thể gây ra điện giật.

Cấp nước

Áp lực nước thích hợp cho máy giặt là từ 50 kPa đến 800 kPa. Áp lực nước dưới 50 kPa có thể khiến cho các van nước không đóng hoàn toàn. Hoặc, có thể mất nhiều thời gian để bơm đầy lồng giặt, làm cho máy giặt tắt. Vòi nước phải nằm trong khoảng cách 120 cm từ phía sau máy giặt để các ống có thể dẫn được đến máy giặt.

Giảm thiểu các khả năng rò rỉ

- Đảm bảo rằng vòi nước nằm trong khoảng cách phù hợp.
- Tắt vòi nước khi không sử dụng máy giặt.
- Kiểm tra rò rỉ ở các bộ phận của ống dẫn nước một cách thường xuyên.

⚠ LƯU Ý

Trước khi sử dụng máy giặt lần đầu, kiểm tra tất cả các kết nối tại van nước và vòi nước để tránh rò rỉ.

Untitled-37 12 2015-01-26 2:59:07

Xả nước

Samsung khuyến cáo nên dùng một ống đứng có chiều cao 65 cm. Ống xả phải được kết nối thông qua các đầu ống nối vào ống đứng và ống đứng phải bao phủ toàn bộ ống xả.

Sàn

Để đạt hiệu quả tốt nhất, máy giặt phải được lắp đặt trên một mặt sàn vững chắc. Sàn gỗ có thể cần phải được gia cố thêm để giảm thiểu độ rung và/hoặc lực tải không cân bằng. Bề mặt thảm và gạch mềm không đủ lực để chống các rung động và có thể khiến máy giặt di chuyển một chút trong quy trình quay.

⚠ **LƯU Ý**

KHÔNG lắp đặt máy giặt trên sàn nhà hoặc cấu trúc kém vững chắc.

Nhiệt độ nước

Không lắp đặt máy giặt ở những nơi nước có thể đóng băng vì máy giặt luôn luôn giữ lại một số nước trong van, máy bơm và/hoặc các ống. Nước đóng băng sót lại trong phần kết nối có thể gây hư hại cho đai truyền động, máy bơm, và các bộ phận khác của máy giặt.

Cài đặt ở góc tường hoặc tủ quần áo

Đảm bảo mặt bằng tối thiểu để vận hành ổn định:

Các mặt	25 mm	Mặt lưng	50 mm
Mặt trên	25 mm	Mặt trước	550 mm

Nếu cả máy giặt và máy sấy được lắp đặt tại cùng một vị trí, mặt trước của hốc tường hoặc tủ quần áo phải có ít nhất 550 mm để không cản trở không khí. Nếu chỉ có máy giặt thì không đòi hỏi về không gian khi mở cửa máy giặt.

Untitled-37 13 2015-01-26 2:59:07

Lắp đặt theo từng bước

BƯỚC 1 - Chọn địa điểm

Yêu cầu về vị trí

- Vững chắc, bề mặt không cần lót thảm hoặc lót sàn vì có thể gây cản trở hệ thống thông gió
- Không nằm trực tiếp dưới ánh nắng mặt trời
- Trang bị đầy đủ cho hệ thống thông gió và hệ thống dây điện
- Nhiệt độ môi trường xung quanh luôn luôn cao hơn điểm đóng băng (0 ˚C)
- Tránh xa nguồn nhiệt

BƯỚC 2 - Tháo các bu lông

Gỡ sản phẩm khỏi kiện hàng và tháo tất cả các bu lông

1. Nới lỏng tất cả các bu lông ở mặt sau của máy bằng cách sử dụng cờ lê đi kèm.

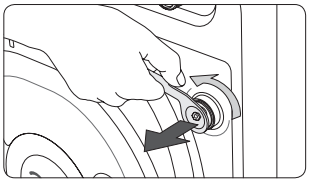

2. Nhét các chốt vặn bu lông nhựa vào các lỗ.
Giữ lại tất cả các bu lông.

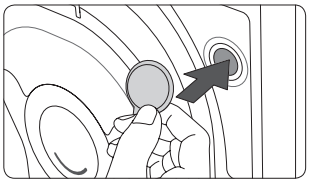

CẢNH BÁO

Bao bì đóng gói có thể nguy hiểm cho trẻ em. Vứt bỏ tất cả các bao bì (túi nhựa, polystyrene, v.v.) ra khỏi tầm với của trẻ em.

BƯỚC 3 - Điều chỉnh chân đế

1. Nhẹ nhàng trượt máy giặt vào đúng vị trí. Dùng sức quá mức có thể làm hỏng chân đế.
2. Điều chỉnh độ cao của máy giặt bằng cách chỉnh tay các chân đế.

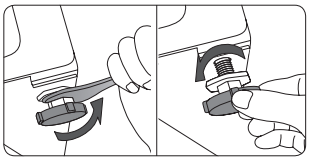

3. Khi hoàn tất điều chỉnh độ cao, xiết chặt các nút bằng cờ lê.

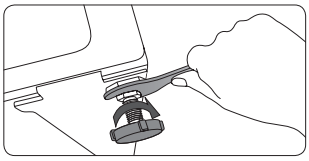

Untitled-37 14 2015-01-26 2:59:07

BƯỚC 4 - Nối ống nước

Nối ống nước vào vòi nước.

1. Gỡ bỏ **adaptor (bộ chuyển đổi) (A)** từ **water supply hose (ống dẫn nước) (B)**.

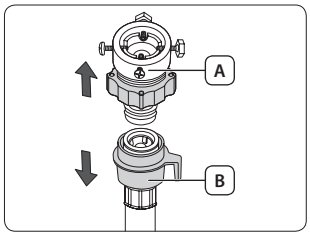

2. Sử dụng tuốc nơ vít hiệu Philips để nới lỏng bốn con ốc trên bộ chuyển đổi.

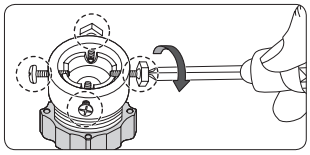

3. Giữ bộ chuyển đổi và xoay **phần (C)** theo hướng mũi tên để nới lỏng chúng thêm 5 mm (*).

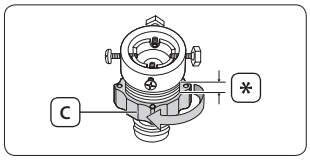

4. Đặt bộ chuyển đổi vào vòi nước, và xiết chặt các con ốc khi nâng bộ chuyển đổi.
5. Xoay **phần (C)** theo hướng mũi tên để xiết chặt.

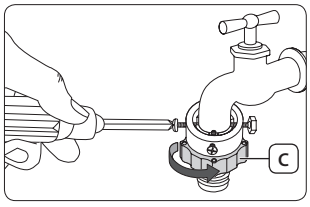

6. Trong khi giữ **phần (E)**, nối ống dẫn nước với bộ chuyển đổi. Sau đó, thả tay khỏi **phần (E)**. Ống nước khớp với bộ chuyển đổi bằng một tiếng click.

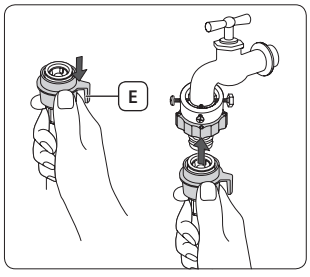

Untitled-37 15 2015-01-26 2:59:08

7. Kết nối đầu kia của ống dẫn nước cho các van nước vào tại mặt sau máy giặt. Xoay theo chiều kim đồng hồ để xiết chặt.

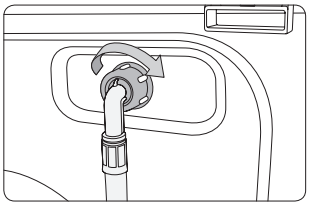

8. Mở vòi nước và kiểm tra nếu có rò rỉ xung quanh khu vực kết nối. Nếu có rò rỉ nước, lặp lại các bước trên.

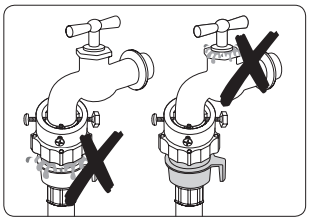

- Nếu sử dụng cùng một loại vít như của vòi nước, kết nối các ống nước đến vòi nước theo hình.

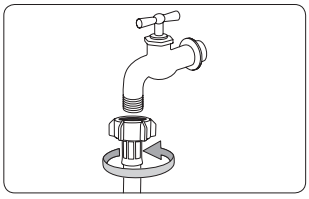

CẢNH BÁO

Ngừng sử dụng máy giặt nếu có rò rỉ nước, và liên hệ với trung tâm dịch vụ Samsung tại địa phương. Nếu không, có thể gây ra điện giật.

LƯU Ý

Không dùng lực để kéo dài ống dẫn nước. Nếu ống quá ngắn, thay thế các ống bằng ống áp suất cao và dài hơn.

- Sau khi kết nối ống dẫn nước với bộ chuyển đổi, kiểm tra nếu nó được kết nối đúng bằng cách kéo ống dẫn nước theo hướng xuống.
- Sử dụng loại vòi nước thông dụng. Nếu vòi nước có dạng hình vuông hoặc quá lớn, loại bỏ các vòng đệm trước khi chèn bộ chuyển đổi vào vòi nước.

Các mẫu đều có thêm một van dẫn nước nóng:

1. Kết nối đầu màu đỏ của ống dẫn nước nóng cho các van dẫn nước nóng vào ở mặt sau của máy giặt.
2. Nối đầu còn lại của ống dẫn nước nóng vào vòi nước nóng.

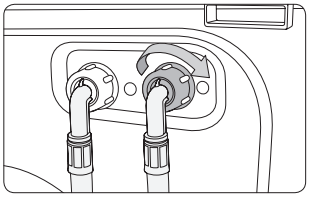

Untitled-37 16 2015-01-26 2:59:08

Ống nhún (tùy theo kiểu máy)

Ống nhún cảnh báo người dùng về nguy cơ rò rỉ nước. Thể hiện dòng chảy và chuyển sang màu đỏ ở **Bộ chỉ báo (A)** nằm ở giữa trong trường hợp có rò rỉ.

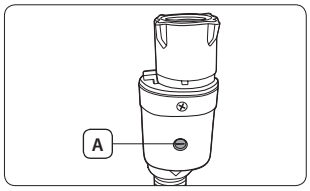

BƯỚC 5 - Đặt ống xả

Đặt ống cả theo ba bước như sau:

Đặt trên thành bồn rửa

Ống xả cần đặt ở độ cao khoảng 60 cm đến 90 cm (*) so với mặt sàn. Để giữ cho ống xả có độ cong, sử dụng **ống dẫn bằng nhựa (A)** đi kèm. Cố định ống dẫn vào tường bằng cách sử dụng một móc để đảm bảo thoát nước ổn định.

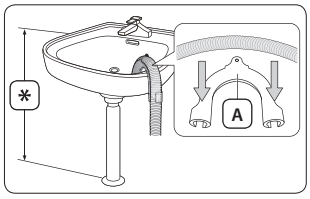

Sử dụng ống thoát nước chìm

Các ống thoát nước phải nằm ở trên ống xi-phông để bảo đảm đuôi ống xả cách mặt đất ít nhất là 60 cm.

Trong ống thoát nước

Ống thoát nước nằm ở độ cao 60cm đến 90cm (*). Khuyến khích sử dụng một ống thẳng dạng đứng cao 65 cm. Đảm bảo rằng các ống xả được kết nối với các đường ống đứng tại chỗ dẫn nước của xi-phông.

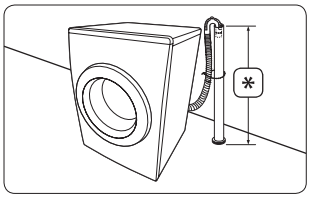

Yêu cầu về ống xả đứng

- Đường kính ít nhất 5 cm.
- Lưu lượng nước chảy ít nhất 60 lít một phút

BƯỚC 6 - Mở máy giặt

Cắm dây nguồn vào một ổ cắm điện AC 220-240V / 50Hz được bảo vệ bởi một cầu chì hoặc thiết bị ngắt mạch. Sau đó nhấn nút **Nguồn** để mở máy giặt.

Untitled-37 17 2015-01-26 2:59:08

Trước khi bắt đầu

Thiết lập ban đầu

Khi chạy máy giặt lần đầu, màn hình chào mừng với logo của Samsung sẽ xuất hiện. Tuân theo hướng dẫn trên màn hình để hoàn thành các thiết lập ban đầu. Bạn có thể thay đổi các thiết lập ban đầu sau đó bằng cách truy cập vào màn hình Setting (cài đặt).

BƯỚC 1 - Set Language (Chọn ngôn ngữ)

Chọn menu ngôn ngữ.

1. Chọn một ngôn ngữ.
2. Nhấn **Next (Tiếp theo)**.

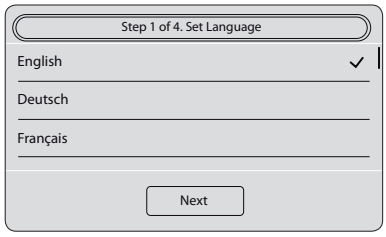

BƯỚC 2 - Set Date & Time (Thiết lập ngày và thời gian)

Thiết lập thời gian hiện tại.

1. Nhấn vào các mũi tên để thiết lập các yếu tố thời gian.
2. Nhấn **Next (Tiếp theo)**.

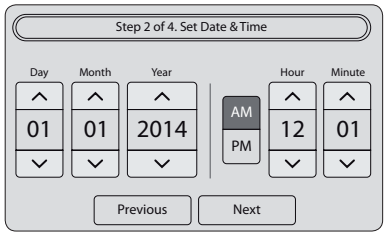

Mặc định thiết lập theo định dạng 12 giờ.
Để thay đổi giữa **AM (Sáng)** và **PM (Chiều)**, đơn giản chỉ cần nhấn vào yếu tố bạn muốn.

Untitled-37 18 2015-01-26 2:59:08

BƯỚC 3 - Set Auto Dispense (Thiết lập bộ chiết rót tự động)

Bộ chiết rót Tự động sẽ pha chế một lượng thích hợp các chất tẩy và chất làm mềm vải vào lồng giặt tùy theo chế độ và chu kỳ.

1. Cả **Auto Detergent (tự động rót nước giặt)** và **Auto Softener (tự động rót nước xả)** được thiết lập là **On (Bật)** theo mặc định. Để thay đổi thiết lập, trượt thanh trượt để **Off (Tắt)**.
2. Thiết lập **Amount (Lượng)** và **Water Hardness (Độ cứng của Nước)**.
3. Thiết lập **Amount (Lượng)** và **Concentration (Nồng độ)**.
4. Nhấn **Next (Tiếp theo)**.

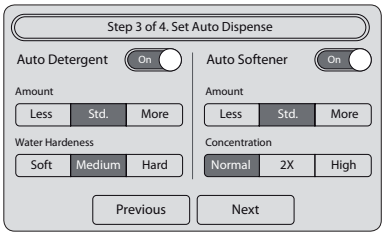

BƯỚC 4 - Set Auto Update (Thiết lập Tự động Cập nhật)

Auto Update (Tự động Cập nhật) tự động cập nhật vi chương trình điều khiển để cải thiện hiệu suất và/hoặc sửa các lỗi thông qua quá trình giao tiếp khi cập nhật máy chủ. Khi vi chương trình điều khiển đã được cập nhật, một vài chức năng của máy giặt sẽ không còn khả dụng tùy theo phiên bản của chương trình điều khiển.

1. Để tự động cập nhật vi chương trình điều khiển, thiết lập **Auto Update (Tự động cập nhật)** là **On (Bật)**.
2. Nhấn **Done (Hoàn thành)**.

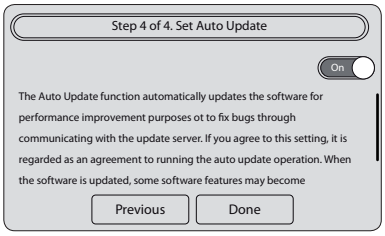

BƯỚC 5- Chạy Calibration (Hiệu chuẩn) (đề nghị)

Calibration (Hiệu chuẩn) bảo đảm máy giặt đo trọng lượng chính xác. Đảm bảo lồng giặt trống trước khi chạy Calibration (Hiệu chuẩn).

1. Nhấn **Setting (cài đặt)** > **Calibration (Hiệu chuẩn)** > **Start (Bắt đầu)**.
   - Cửa máy giặt sẽ bị khóa khi máy đang vận hành.
   - Lồng giặt sẽ quay theo chiều kim đồng hồ và ngược chiều kim đồng hồ trong vài phút.
2. Khi hoàn thành, máy giặt sẽ tự động tắt.

Untitled-37 19 2015-01-26 2:59:09

Hướng dẫn giặt quần áo

BƯỚC 1- Phân loại

Phân loại quần áo theo các tiêu chí sau:

- **Nhãn quần áo**: Phân loại quần áo theo loại vải như cô-tông, hỗn hợp, sợi tổng hợp, lụa, len, tơ nhân tao.
- **Màu sắc**: Phân riêng quần áo trắng và quần áo màu.
- **Kích cỡ**: Bỏ chung các loại quần áo với nhiều kích cỡ khác vào lồng giặt sẽ cải thiện hiệu suất giặt.
- **Độ co giãn**: Giặt quần áo mỏng riêng sử dụng tùy chọn Dễ Ủi cho các loại quần áo làm từ tơ tằm, len, rèm cửa hoặc lụa. Kiểm tra nhãn trên quần áo.

Đảm bảo đã kiểm tra nhãn trên quần áo và phân loại chúng trước khi giặt.

BƯỚC 2 - Lấy hết đồ trong túi ra

Lấy hết đồ trong các túi của quần áo cần giặt ra.

- Các vật thể kim loại như đồng tiền, ghim và khóa thắt lưng trên quần áo có thể làm hỏng quần áo cũng như lồng giặt.

Lộn trái quần áo có nút và mặt thêu vào trong.

- Nếu dây kéo của quần tây hoặc áo khoác mở trong khi giặt, lồng giặt có thể bị hư hỏng. Nên kéo dây kéo lại và cố định bằng dây.
- Quần áo nhiều dây dài có thể vướng vào các quần áo khác. Đảm bảo đã cột các dây lại trước khi giặt.

BƯỚC 3- Sử dụng túi giặt

- Áo nịt ngực (loại có thể giặt) phải được đặt trong túi giặt. Các phần kim loại của áo nịt ngực có thể bị gãy và làm rách các áo quần khác.
- Các áo quần nhỏ, nhẹ như vớ, găng tay, vớ dài và khăn tay có thể bị vướng vào cửa máy giặt. Đặt chúng vào một túi giặt loại tốt.
- Không giặt túi giặt mà không kèm theo các quần áo khác. Có thể gây ra rung động bất thường khiến máy giặt bị lắc và gây ra thương tích.

BƯỚC 4 - Giặt sơ (nếu cần)

Với quần áo cô-tông bị dính bẩn nhiều, thêm tùy chọn Giặt sơ vào chế độ giặt đã chọn với chất tẩy có gốc protein.

Untitled-37 20 2015-01-26 2:59:09

BƯỚC 5 - Xác định công suất giặt

Không sử dụng máy giặt quá tải. Quá tải có thể khiến máy giặt không đúng. Về công suất giặt của từng loại quần áo, xem trang **29**.

Khi giặt bộ đồ giường hoặc các tấm trải giường, thời gian giặt có thể dài hơn nếu không có thể giảm hiệu quả quay. Với bộ đồ giường hoặc tấm trải giường, tốc độ vòng quay tối đa theo đề nghị là 800 vòng/phút và công suất giặt là từ 2.0 kg trở xuống.

LƯU Ý

Nếu quần áo không cân bằng và mã lỗi "**UE**" hiển thị, vui lòng sắp xếp lại quần áo. Quần áo không cân bằng có thể làm giảm hiệu suất quay.

BƯỚC 6- Sử dụng đúng loại chất tẩy

Loại chất tẩy tùy theo loại vải (cô-tông, sợi tổng hợp, vải mỏng, len), màu sắc, nhiệt độ giặt và mức độ vấy bẩn. Luôn luôn sử dụng loại chất tẩy "ít bọt", được thiết kế cho máy giặt tự động.

- Tuân theo đề nghị của nhà sản xuất chất tẩy dựa trên trọng lượng của quần áo, mức độ vấy bẩn và độ cứng của nước trong khu vực địa phương của bạn. Nếu không chắc về độ cứng của nước, liên hệ với phía quản lý nguồn nước ở địa phương của bạn.
- Không sử dụng các loại chất tẩy có khuynh hướng tạo cứng hoặc tạo đông. Chất tẩy có thể còn sót lại sau chu trình xả, làm nghẹt đường thoát nước.

LƯU Ý

Khi giặt đồ len sử dụng chế độ giặt dành cho len, chỉ sử dụng chất tẩy trung tính. Nếu đã sử dụng Chế độ giặt cho len, bột tẩy có thể còn sót lại và làm phai màu quần áo.

Untitled-37 21 2015-01-26 2:59:09

Hướng dẫn sử dụng bột giặt

Bộ phận rót tự động

Máy giặt cung cấp một bộ chiết rót hai ngăn: ngăn trái dành cho chất tẩy, và ngăn phải dành cho chất làm mềm vải. Bộ chiết rót Tự động sẽ pha chế một lượng thích hợp các chất tẩy và chất làm mềm vải vào lồng giặt tùy theo chế độ và chu kỳ.

⚠ **LƯU Ý**

- Chỉ sử dụng chất tẩy và chất làm mềm vải dạng lỏng khi dùng Bộ chiết rót Tự động.
- Đảm bảo đặt Bộ chiết rót Tự động vào khớp vị trí. Máy giặt sẽ không khởi động cho đến khi Bộ chiết rót Tự động được đặt đúng vị trí.
- Khi đổ chất tẩy khác vào, phải đảm bảo làm vệ sinh ngăn đựng chất tẩy trước.
- Không trộn chất tẩy với chất làm mềm vải ở cả hai ngăn.
- Để tránh chất tẩy bị đông lại, không mở nắp sau khi đã đổ chất tẩy vào ngăn.
- Không sử dụng chất tẩy trắng vì có thể gây ra ăn mòn và/hoặc tạo ra khí.
- Không lật ngược Bộ chiết rót Tự động. Những thứ chứa bên trong có thể tràn ra ngoài qua các lỗ thông hơi.
- Không ấn phần ống xả tại phần đáy của đơn vị Tự Động Phân Phối trong khi di chuyển đơn vị. Phần bên trong có thể thoát ra ngoài.
- Cẩn thận khi thêm chất tẩy rửa hoặc nước xả vào máy giặt. Phần bên trong có thể tràn ra xung quanh.
- Hãy nhớ tháo máy giặt Phân Phối Tự Động trước khi sử dụng chất tẩy rửa.
- Khi tháo bộ phận Phân Phối Tự Động để kiểm tra lượng chất tẩy rửa còn sót lại khi thấy thông báo lỗi hoặc trước đó, máy giặt có thể có một lượng nhỏ chất tẩy rửa còn sót lại hoặc thoát ra từ phần đáy của máy giặt.
- Thêm đầy đủ bộ phận Phân Phối Tự Động. Không thêm đầy đủ có thể khiến máy giặt không thể phân phối được.
- Theo mặc định, Auto Dispense (Bộ phận rót tự động) sẽ tắt trong chức năng giặt Delicates (Vải mỏng), Wool (Len), Baby Care (Quần áo trẻ em), hoặc Outdoor Care (Quần áo mặc ngoài).

  Để kích hoạt Auto Dispense (Bộ phận rót tự động) trong các chức năng giặt này, hãy ấn **Setting (cài đặt)** hoặc **Thanh điều khiển nhanh** > **Auto Dispense (Bộ phận rót tự động)** và thay đổi các thiết lập cần thiết.

Untitled-37 22 2015-01-26 2:59:09

1. Mở cửa, kéo bộ chiết rót Tự động ra khỏi máy giặt.

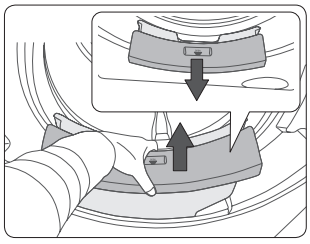

2. Xoay núm bên trái ngược chiều kim đồng hồ để mở và đổ chất tẩy vào ngăn bên trái đến vạch giới hạn tối đa.
3. Xoay núm bên phải ngược chiều kim đồng hồ để mở, và đổ chất làm mềm vải vào ngăn bên phải đến vạch giới hạn tối đa.
4. Khóa các núm bằng cách vặn chúng theo chiều kim đồng hồ.

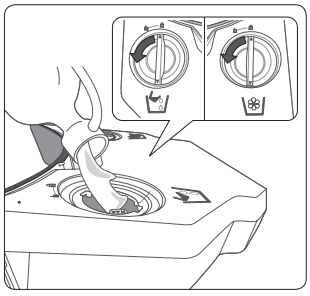

5. Đặt lại bộ chiết rót Tự động vào vị trí ban đầu.
   Lưu ý khi đặt bộ chiết rót vì những thứ chứa bên trong có thể tràn ra ngoài qua các lỗ thông hơi ở hai bên.
6. Bật **Auto Detergent (tự động rót nước giặt)** và **Auto Softener (tự động rót nước xả)**.
   Xem "**Auto Dispense (Bộ chiết rót Tự động)**" ở trang **33**.

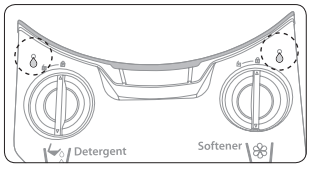

Untitled-37 23
2015-01-26 2:59:09

Xả thủ công

Trong trường hợp bạn không muốn sử dụng vòi xả (Thiết bị xả tự động), bạn có thể trộn bột giặt trực tiếp vào lồng giặt hoặc sử dụng các viên sỏi giặt được cung cấp kèm theo khi cho bột giặt vào máy bằng cách thủ công. Các viên sỏi giặt có hai kích cỡ và được cung cấp cùng với thiết bị. Chọn một viên sỏi giặt có kích cỡ phù hợp với lượng bột giặt.

1. Tắt **Auto Detergent (tự động rót nước giặt)**.
   Xem "**Auto Dispense (Bộ chiết rót Tự động)**" ở trang **33**.
2. Đổ bột, gel hoặc chất tẩy lỏng vào đúng **Aqua pebble (Sỏi giặt)(A)**. Kiểm tra mức đánh dấu bên trong sỏi giặt.

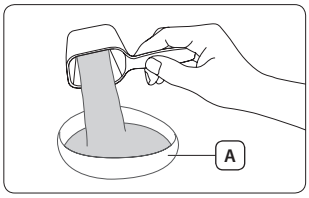

3. Đặt sỏi giặt vào phần đáy của lồng giặt.

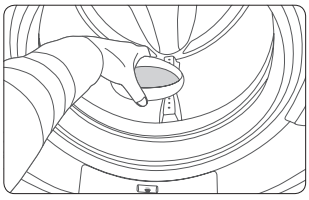

Khi hoàn tất quá trình giặt, lấy sỏi giặt ra khỏi lồng giặt và rửa sạch để sử dụng lần sau.

LƯU Ý

- Chỉ có thể cho chất làm mềm vải vào bằng cách sử dụng thiết bị xả tự động. Không cho phép cho chất làm mềm vải vào bằng cách thủ công.
- Lưu ý khi đặt sỏi giặt vì nó cần phải được cân bằng trước khi giặt. Đổ sỏi giặt trước khi bắt đầu giặt có thể gây ra dư lượng chất tẩy trên quần áo vào cuối quá trình giặt, gây phai màu quần áo và/hoặc giảm hiệu suất giặt.
- Không thêm chất tẩy vào cả ngăn tự động rót chất tẩy và sỏi giặt.
- Khi đổ chất tẩy khác vào, phải đảm bảo làm sạch sỏi giặt trước.
- Không đặt sỏi giặt vào chăn mền hoặc giữa các loại áo quần khác nhau.
- Không chọn chế độ Pre Wash (Giặt sơ) khi sử dụng sỏi giặt.
- Sử dụng lượng lớn chất tẩy rửa có thể dẫn đến những vấn đề sau, gây hư hỏng hệ thống và/hoặc giảm tuổi thọ sản phẩm.
- Quá nhiều chất tẩy rửa gây thừa bọt và kéo dài thời gian xả nước.
- Điều này cũng dẫn đến đọng lại chất tẩy rửa ở lồng máy sau khi quá trình giặt hoàn tất.
- Sử dụng đúng lượng chất tẩy rửa theo thông số kỹ thuật của nhà sản xuất chất tẩy rửa.
- Trong trường hợp định lượng bột giặt bằng cách thủ công, chúng tôi khuyến khích bạn sử dụng Viên sỏi giặt khi giặt các loại đồ có màu.

Untitled-37 24 2015-01-26 2:59:09

Vận hành

Màn hình

Màn hình thực tế sẽ khác với hình ảnh bên dưới tùy theo kiểu máy.

Màn hình chính

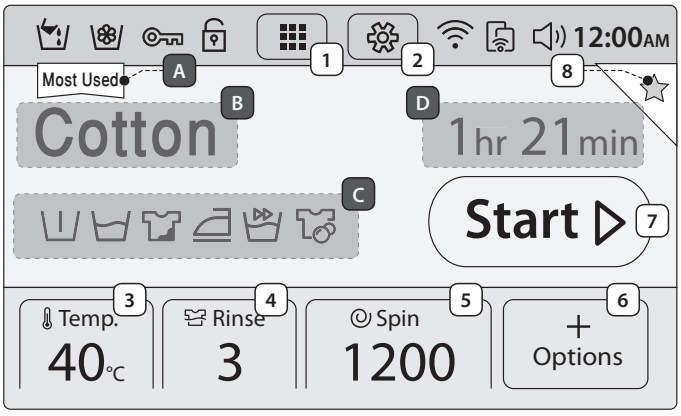

Các nút

1	**Chế độ**	Nhấn để nhập tên chế độ.
2	**Setting (cài đặt)**	Nhấn để chọn màn hình thiết lập.
3	**Temp. (Nhiệt độ)**	Nhấn để thay đổi nhiệt độ của chế độ giặt hiện tại.
4	**Rinse (Xả)**	Nhấn để thay đổi số lần xả của chế độ giặt hiện tại.
5	**Spin (Quay)**	Nhấn để thay đổi tốc độ quay của quá trình giặt hiện tại.
6	**Options (Tùy chọn)**	Nhấn để nhập màn hình tùy chọn.
7	**Start (Bắt đầu)**	Nhấn để bắt đầu vận hành.
8	**Favourite (Ưa thích)**	Nhấn để thêm cấu hình giặt hiện tại vào Danh sách ưa thích. Bạn có thể thêm đến 4 chế độ, sẽ được ưu tiên xuất hiện trên danh sách tên chế độ.

Thông tin

A	**Most Used (Sử dụng thường xuyên)**	Hiển thị các chế độ được sử dụng thường xuyên nhất.
B	**Chế độ hiện tại**	Hiển thị chế độ hiện tại
C	**Tùy chọn kích hoạt**	Hiển thị (các) tùy chọn kích hoạt trong chế độ hiện tại.
D	**Thời gian ước lượng**	Hiển thị thời gian vận hành ước lượng của chế độ hiện tại.

Untitled-37 25 2015-01-26 2:59:10

Thanh trạng thái

	Auto Detergent (tự động rót nước giặt)	Nếu đèn chỉ thị mở, Auto Detergent (tự động rót nước giặt) đang bật.
	Auto Softener (tự động rót nước xả)	Nếu đèn chỉ thị mở, Auto Softener (tự động rót nước xả) đang bật.
	Door Lock (Khóa cửa)	Nếu đèn chỉ thị mở, cửa đã khóa để tránh cửa bị mở trong quá trình vận hành.
	Child Lock (Khóa trẻ em)	Nếu biểu tượng này có hình ổ khóa bị khóa [ ], Child Lock (Khóa trẻ em) được thiết lập để ngăn ngừa tai nạn cho trẻ em hoặc trẻ sơ sinh.
	Network (Mạng)	Hiển thị tình trạng kết nối Wi-Fi.
	Smart Control (Điều khiển thông minh)	Nếu đèn chi thị mở, có thể điều khiển máy giặt bằng thiết bị di động.
	Sound (Âm thanh)	Nếu biểu tượng ở chế độ Im lặng [ ], thì âm thanh đã được tắt.
12:00AM	**Thời gian**	Thời gian hiện tại sẽ được hiển thị.

Thanh điều khiển nhanh

Trên **Thanh điều khiển nhanh**, có 6 mục khả dụng: Child Lock (Khóa trẻ em), Drum Light (Chiếu sáng lồng giặt), Auto Detergent (tự động rót nước giặt), Auto Softener (tự động rót nước xả), Network (Mạng), và Smart Control (Điều khiển thông minh).

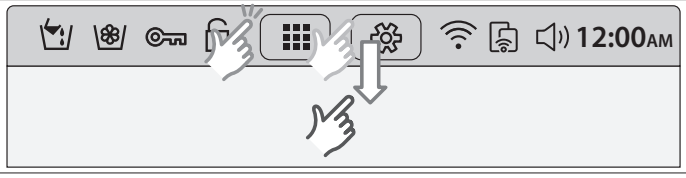

1. Nhấn vào **Thanh trạng thái**, hoặc lướt về phía dưới để hiển thị các mục khả dụng.

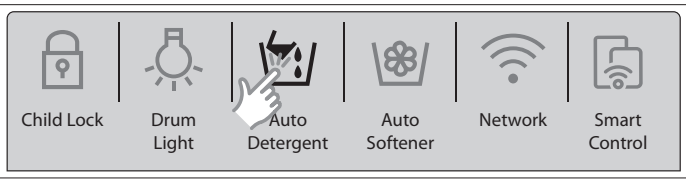

2. Nhấn để bật/tắt một mục hoặc thay đổi thiết lập hiện tại.

- Với thiết lập nâng cao, chuyển đến màn hình thiết lập, và thay đổi sang thiết lập ưa thích của bạn.
- Mục kích hoạt sẽ sáng lên trong khi các mục không kích hoạt có màu xám.

Untitled-37 26 2015-01-26 2:59:11

Màn hình tùy chọn

1	**Quick Wash (Giặt nhanh)**	Dành cho quần áo bẩn ít với tải trọng không quá 2 kg.
2	**Pre Wash (Giặt sơ)**	Một chu trình giặt phụ được thêm vào trước quá trình giặt chính.
3	**Intensive (Giặt mạnh)**	Thời gian vận hành ở mỗi chu trình dài hơn bình thường.
4	**Soaking+ (Ngâm+)**	Rất hữu ích để loại bỏ vết bẩn khó tẩy trên áo quần.
5	**Easy Iron (Dễ ủi)**	Rất hữu ích để giảm nếp nhăn của quần áo.
6	**Delay End (Kết thúc trì hoãn)**	Sử dụng để chỉ định thời gian kết thúc của chế độ. Xem trang **32**.
7	**Quay lại**	Quay lại màn hình chính.

Để biết thêm chi tiết về phần này, xem "**Options (Tùy chọn)**" trên trang **31**.

Untitled-37 27 2015-01-26 2:59:11

Các bước đơn giản để bắt đầu

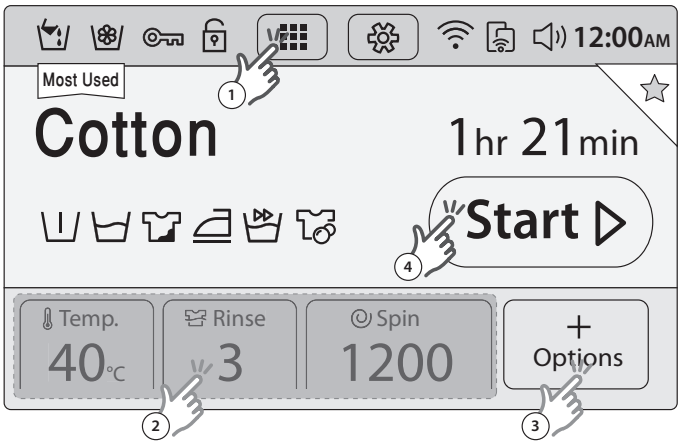

1. Nhấn nút **Nguồn** để hiển thị màn hình chính.
2. Trên màn hình chính, nhấn biểu tượng **Chế độ** trên đầu màn hình hiển thị tên chế độ.
3. Chọn một chế độ. Máy giặt hỗ trợ 22 chế độ.
4. Thay đổi thiết lập (**Temp. (Nhiệt độ)**, **Rinse (Xả)**, và **Spin (Quay)** nếu cần.
5. Nhấn biểu tượng **Options (Tùy chọn)** ở góc dưới bên phải. Sau đó, chọn các tùy chọn và thay đổi thiết lập tùy chọn.
6. Nhấn **Start (Bắt đầu)**.

- Máy giặt có các thiết lập chế độ mặc định và các tùy chọn khả dụng cho mỗi chế độ. Bạn có thể sử dụng theo mặc định hoặc thay đổi theo sở thích của bạn.
- Bạn có thể chọn một chế độ trên màn hình chính. Đơn giản chỉ cần lướt màn hình về phía bên trái để mở chế độ kế tiếp. Để quay lại danh sách trước, chỉ cần lướt sang bên phải.

Untitled-37 28 2015-01-26 2:59:11

Tổng quan chế độ

Các chế độ tiêu chuẩn

Chế độ	Mô tả và Tải trọng tối đa (kg)	
Favourite (Ưa thích)	• Thêm cấu hình của chế độ hiện tại vào danh sách Ưa thích và sau đó truy cập cấu hình chế độ một cách nhanh chóng. Bạn có thể thêm đến 4 chế độ, sẽ được ưu tiên xuất hiện trên danh sách tên chế độ.	-
Most Used (Sử dụng thường xuyên)	• Chế độ sử dụng thường xuyên được hiển thị phía trên góc bên trái màn hình chính theo mặc định.	-
Auto Optimal Wash (Giặt Tối Ưu Tự Động)	• Auto Optimal Wash (Giặt Tối Ưu Tự Động) (Giặt thông minh) điều chỉnh lượng chất tẩy và chu trình theo trọng lượng quần áo và độ vấy bẩn. Sử dụng tốt nhất với tính năng Tự động rót.	Tối đa
Cotton (Vải cô-tông)	• Cho cô-tông, khăn trải giường, khăn trải bàn, đồ lót, khăn tắm, hoặc áo sơ mi. • Thời gian giặt và số chu kỳ xả được tự động điều chỉnh theo tải trọng.	Tối đa
Synthetics (Vải tổng hợp)	• Đối với áo cánh hoặc áo sơ mi được làm bằng polyester (diolen, trevira), polyamide (perlon, nylon), hoặc tương tự.	5
Denim (Vải denim)	• Giặt với mực nước cao hơn quá trình giặt chính và một chu kỳ xả phụ để đảm bảo rằng bột tẩy không sót lại.	3
Dark Garment (Quần áo có màu tối)	• Xả bổ sung và giảm vòng quay để đảm bảo rằng quần áo được giặt nhẹ nhàng và xả hoàn toàn.	4
Super Speed (Tốc độ cao)	• Giặt nhanh trong vòng 1 giờ cho các quần áo hàng ngày như đồ lót và áo sơ mi.	5
Super Eco Wash (Giặt thân thiện với môi trường)	• Công nghệ Eco Bubble giúp làm giảm điện năng tiêu thụ. Với tính năng hiệu suất giặt nhiệt độ thấp, chế độ giặt siêu tiết kiệm sẽ so sánh hiệu suất giặt và điện năng tiết kiệm với chu trình Eco Bubble-less Cotton thông thường.	4
Outdoor Care (Quần áo mặc ngoài)	• Đối với quần áo mặc ngoài, đồ trượt tuyết, và trang phục thể thao được làm bằng vật liệu chức năng như spandex, voan, và sợi siêu nhỏ.	2
Baby Care (Quần áo trẻ em)	• Giặt ở nhiệt độ cao và tăng cường xả để đảm bảo không sót bột tẩy.	4
Wool (Len)	• Tải trọng cụ thể không quá 2.0 kg cho các loại quần áo len có thể giặt được. • Chế độ giặt đồ len có tính năng giữ chất bồng nhẹ của len và ngâm để bảo vệ các sợi len không co rút/biến dạng. • Đề nghị sử dụng chất tẩy trung trính.	2

Untitled-37 29 2015-01-26 2:59:11

Chế độ	Mô tả và Tải trọng tối đa (kg)	
Delicates (Vải mỏng)	• Đối với các loại vải sheer, áo nịt ngực, đồ lót (lụa), và các loại vải chỉ được giặt tay. • Để đạt hiệu quả tối đa, sử dụng chất tẩy lỏng.	2
Bedding (Bộ đồ giường)	• Với ra trải giường, khăn trải giường, tấm trải giường, v.v. • Để có kết quả tốt nhất, chỉ gặt 1 loại bộ đồ giường và chắc chắn trọng lượng ít hơn 2,5 kg.	2,5
Spin (Quay)	• Một chu kỳ quay bổ sung để vắt hết nước.	-
Rinse+Spin (Xả+Quay)	• Xả bổ sung sau khi cho chất làm mềm vải vào máy giặt.	-
Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường)	• Vệ sinh lồng giặt bằng cách loại bỏ bụi bẩn và vi khuẩn trong lồng. • Thực hiện sau mỗi 40 lần giặt không cần cho chất tẩy hoặc thuốc tẩy vào. • Đảm bảo lồng giặt trống. • Không sử dụng bất kỳ chất làm sạch nào khi vệ sinh lồng giặt.	-
Cotton (vải cô-tông tiết kiệm năng lượng)	• Hiệu suất tối ưu ít tiêu hao năng lượng với các loại vải cô-tông, khăn trải giường, khăn trải bàn, đồ lót, khăn tắm hoặc áo sơ mi.	Tối đa

Chu Kỳ Đặc Biệt

Sáu chế độ chuyên dụng được thiết kế để loại bỏ hiệu quả các vết bám và vết bẩn có thể tích lũy qua các hoạt động cụ thể khác nhau, từ nội trợ đến leo núi chuyên nghiệp.

Chế độ	Mô tả và Tải trọng tối đa (kg)	
Cooking&Dining (Nấu ăn và Ăn tối)	• Giúp loại bỏ hiệu quả các vết thực phẩm và các vết bẩn khi nấu ăn.	4
Gardening (Làm vườn)	• Loại bỏ hiệu quả các vết bẩn từ cỏ và bùn/vết bẩn và làm sạch mồ hôi và da dầu.	4
Active Sports (Quần áo thể thao)	• Loại bỏ hiệu quả các vết bẩn từ cỏ, đất, bùn, vết bẩn thức ăn, mồ hôi, và chất trang điểm. • Không sử dụng chế độ này cho các quần áo không thấm nước. Điều đó có thể dẫn đến hỏng khả năng chống thấm nước hoặc hít thở.	4
Active Kids (Quần áo trẻ em)	• Chế độ Active Kids (Quần áo trẻ em) dành cho các quần áo trẻ em. Chế độ này loại bỏ hiệu quả các vết bẩn thực phẩm, nước trái cây, nước uống, bùn, đất, mực, bút chì.	4
Working&Everyday (Áo quần công sở và hàng ngày)	• Chế độ Working&Everyday (Áo quần công sở và hàng ngày) được dùng cho quần áo vấn bẩn ít. Chế độ này loại bỏ hiệu quả các vết bẩn do mực và bút chì và làm sạch các vết bẩn thường ngày.	4

Untitled-37 30 2015-01-26 2:59:11

Chế độ	Mô tả và Tải trọng tối đa (kg)	
Hygiene Care (Quần áo y tế)	• Giúp loại bỏ hiệu quả các vết bẩn do da dầu và các vết máu.	4

Options (Tùy chọn)

Tùy chọn khả dụng khác nhau tùy theo từng chế độ. Các tùy chọn không kích hoạt của chế độ cụ thể sẽ có màu xám.

Options (Tùy chọn)	Mô tả
Quick Wash (Giặt nhanh)	• Dành cho Quần áo ít bẩn có tải trọng không quá 2 kg. • Phải mất tối thiểu khoảng 15 phút, tùy theo các điều kiện như áp lực nước, độ cứng của nước và hoặc tùy chọn phụ được lựa chọn. • Thời gian cho Quick Wash (Giặt nhanh) tăng theo cấp độ sau: Tắt > 15 phút > 20 phút > 30 phút > 40 phút > 50 phút > 60 phút. • Lượng chất tẩy theo đề nghị không quá 20 g (cho tải trọng 2 kg).
Pre Wash (Giặt sơ)	• Điều này sẽ bổ sung một chu trình giặt sơ vào trước chu trình giặt chính.
Soaking+ (Ngâm+)	• Loại bỏ hiệu quả các vết bẩn nhờ ngâm quần áo. • Mỗi chu kỳ ngâm lắc lồng giặt trong 1 phút và đứng yên trong 4 phút. Bạn có thể thiết lập thời gian Soaking+ (Ngâm+) từ 30 phút đến 150 phút.
Intensive (Giặt mạnh)	• Cho các quần áo rất bẩn. Thời gian vận hành ở mỗi chu trình dài hơn bình thường.
Easy Iron (Dễ ủi)	• Tốc độ quay giảm để giảm nếp nhăn. • Thiết lập tốc độ quay tối đa đến 800 vòng/phút.
Delay End (Kết thúc trì hoãn)	• Thời gian hiển thị đề cập đến thời gian kết thúc của chế độ.

Untitled-37 31 2015-01-26 2:59:11

Delay End (Kết thúc trì hoãn)

Bạn có thể thiết lập máy giặt kết thúc chế độ hiện tại sau một khoảng thời gian chỉ định.
Rất hữu ích nếu bạn muốn kết thúc quá trình giặt vào thời gian bạn trở về nhà từ công ty.

1. Chọn một chế độ. Thay đổi thiết lập chế độ nếu cần.
2. Nhấn biểu tượng **Options (Tùy chọn)** ở góc dưới bên phải.
   Sau đó, chọn các tùy chọn và thay đổi thiết lập tùy chọn.
3. Nhấn **Delay End (Kết thúc trì hoãn)**.
4. Sử dụng các mũi tên để thiết lập thời gian kết thúc chế độ hiện tại và nhấn **Start (Bắt đầu)**.

• Để xóa tùy chọn này, nhấn **Cancel (Hủy)** và quay lại màn hình Tùy chọn.

Trường hợp sử dụng

Bạn muốn chế độ giặt kéo dài 2 giờ kết thúc sau 3 giờ kể từ thời điểm này. Nếu vậy, bạn thêm tùy chọn Delay End (Kết thúc trì hoãn) vào chế độ hiện tại với thiết lập 3 giờ và nhấn nút Start/Pause (Bắt đầu/Tạm dừng) vào lúc 2 giờ chiều. Chuyện gì sẽ xảy ra? Máy giặt bắt đầu vận hành vào lúc 3:00 giờ chiều và kết thúc vào lúc 05:00 giờ chiều. Dưới đây là mô tả về lịch biểu của ví dụ này.

Untitled-37 32 2015-01-26 2:59:12

Setting (cài đặt)

Child Lock (Khóa trẻ em)

Để ngăn ngừa tai nạn cho trẻ em hoặc trẻ sơ sinh, Child Lock (Khóa trẻ em) khóa tất cả các nút ngoại trừ nút **Setting (cài đặt)**.

Bạn có thể truy cập vào menu Child Lock (Khóa trẻ em) từ màn hình Setting (cài đặt) trên thanh điều khiển nhanh.

- Để thiết lập Child Lock (Khóa trẻ em), nhấn **Setting (cài đặt)** và nhấn nút **Child Lock (Khóa trẻ em)**.
- Để kích hoạt Child Lock (Khóa An toàn), nhấn và giữ nút **Activate (Kích hoạt)** trong khoảng 3 giây.
- Để ngừng Child Lock (Khóa An toàn) tạm thời, nhấn và giữ nút Temporarily **Deactivate (Ngừng Tạm thời)** trong khoảng 3 giây.
- Để dừng Child Lock (Khóa An toàn) hoàn toàn, nhấn và giữ nút **Deactivate (Ngừng)** trong khoảng 3 phút.

- Để thêm chất tẩy, quần áo vào lồng giặt hoặc thay đổi thiết lập chế độ trong trạng thái Child Lock (Khóa trẻ em), bạn phải ngừng hoặc thoát khỏi chế độ Child Lock (Khóa trẻ em).
- Child Lock (Khóa trẻ em) sẽ được kích hoạt trở lại sau một phút tạm ngừng.

Chiếu sáng lồng giặt

- Để bật hoặc tắt Drum Light (Chiếu sáng lồng giặt), nhấn **Setting (cài đặt)** và trượt thanh **Drum Light (Chiếu sáng lồng giặt)** thành **On (Bật)** hoặc **Off (Tắt)**.
- Đèn lồng giặt sẽ tự động tắt sau 5 phút.

Auto Dispense (Bộ chiết rót Tự động)

Máy giặt cung cấp một bộ chiết rót gồm hai ngăn: một dành cho chất tẩy, và ngăn còn lại dành cho chất làm mềm vải. Bộ chiết rót Tự động sẽ pha chế một lượng thích hợp các chất tẩy và chất làm mềm vải vào lồng giặt tùy theo chế độ và chu kỳ.

Để bật Auto Dispense (Bộ phận rót tự động)

1. Nhấn **Setting (cài đặt)** > **Auto Dispense (Bộ phận rót tự động)**.
2. Trượt thanh **Auto Detergent (tự động rót nước giặt)** thành **On (Bật)**, và thiết lập **Amount (Lượng)** và **Water Hardness (Độ cứng của Nước)**.
3. Lướt thanh **Auto Detergent (tự động rót nước giặt)** thành **On (Bật)**, và thiết lập **Amount (Lượng)** và **Concentration (Nồng độ)**.
4. Nhấn **Save (Lưu)**.

Brightness (Độ sáng)

Thiết lập độ sáng của màn hình LCD.

- Nhấn **Setting (cài đặt)**, và nhấn ký hiệu (-/+) để tăng hoặc giảm độ sáng.

Untitled-37 33 2015-01-26 2:59:12

Sound Theme (Âm Thanh Chủ Đề)

Thiết lập âm lượng và giai điệu tiếng bíp.

1. Nhấn **Setting (cài đặt)** > **Sound Theme (Âm Thanh Chủ Đề)**.
2. Để điều chỉnh âm lượng, nhấn ký hiệu (-/+) để tăng hoặc giảm âm lượng.
3. Để chọn giai điệu cho tiếng bíp, nhấn một chủ đề trong danh sách.

Date & Time (Ngày & Giờ)

Mặc định thiết lập theo định dạng 12 giờ.

1. Nhấn **Setting (cài đặt)** > **Date & Time (Ngày & Giờ)**.
2. Nhấn vào các mũi tên để thay đổi các yếu tố thời gian. Ví dụ, để thay đổi ngày, sử dụng các mũi tên trên và dưới các yếu tố ngày.
3. Để thay đổi giữa **AM (Sáng)** và **PM (Chiều)**, đơn giản chỉ cần nhấn vào yếu tố bạn muốn.
4. Nhấn **Save (Lưu)**.

Language (Ngôn ngữ)

Chọn menu ngôn ngữ ưa thích.

- Nhấn **Setting (cài đặt)** > **Language (Ngôn ngữ)**, và chọn menu ngôn ngữ phù hợp.

Network (Mạng)

Tự động thiết lập

Máy giặt hỗ trợ các giao thức Wi-Fi thông qua WEP, TKIP và AES nhưng không qua một bộ định tuyến (AP).

1. Nhấn **Setting (cài đặt)** > **Network (Mạng)**, và sau đó lướt thanh **Network (Mạng)** thành **On (Bật)**. Danh sách AP xuất hiện.
2. Nhấn một nhà cung cấp mạng, nhập mật mã nếu có yêu cầu.
3. Nhấn **OK (Đồng ý)**. Khi hoàn tất, sẽ có dấu chọn ở nhà cung cấp mạng được chọn.

Thiết lập bằng tay

1. Bật Wi-Fi theo hướng dẫn trên.
2. Nhấn **Set IP (Thiết lập IP)** > **Manual (Thủ công)**.
3. Cung cấp một IP Address (Địa chỉ IP), Subnet mask (Lớp mạng), Gateway (Cổng), và DNS, và sau đó nhấn **OK (Đồng ý)**.

Kết nối Wi-Fi

Một khi kết nối mạng được thiết lập, lần tới nếu bạn muốn bật hoặc tắt kết nối Wi-Fi, trượt thanh **Network (Mạng)** thành **On (Bật)** hoặc **Off (Tắt)**.

Kết nối dễ dàng

Easy Connection (Kết nối dễ dàng) cho phép bạn dễ dàng cấu hình thiết lập mạng bao gồm các thủ tục xác thực.

Untitled-37 34 2015-01-26 2:59:12

Smart Control (Điều khiển thông minh)

Với Smart Control (Điều khiển thông minh), bạn có thể điều khiển máy giặt của bạn bằng thiết bị di động. Nhấn vào biểu tượng để bật hoặc tắt chức năng Smart control (Điều khiển thông minh).

1. Nhấn **Setting (cài đặt)** > Lướt thanh **Smart Control (Điều khiển thông minh)** thành **On (Bật)**.
2. Trở lại màn hình chính, Smart Control (Điều khiển Thông minh) được kích hoạt.
3. Gõ vào **Deactivate (Ngừng)** để tắt chức năng, Smart Control (Điều khiển Thông minh) được dừng.

- Biểu tượng sẽ có màu xám nếu Smart Control (Điều khiển thông minh) không được kích hoạt.
- Các thao tác như nhấn biểu tượng hoặc ấn nút trên máy giặt sẽ tắt kích hoạt Smart Control (Điều khiển thông minh).
- Nếu không kết nối được với mạng không dây, thì Smart Control (Điều khiển Thông minh) không khả dụng.
- Chọn một phương thức kết nối với các thiết bị ngoại vi khi nhấn Smart Control (Điều khiển thông minh).

Kiểm tra môi trường

Hiệu quả năng lượng/nước của 4 chế độ gần nhất được hiển thị với một bản tóm tắt kỹ thuật về tiêu hao năng lượng, mức nước, thiết lập chế độ và các tùy chọn.

1. Nhấn **Setting (cài đặt)** > **Eco Check (Kiểm tra môi trường)**. Màn hình tóm tắt 4 chế độ gần nhất xuất hiện.
2. Nhấn vào một chế độ để hiển thị tóm tắt kỹ thuật của chế độ được chọn.

Self Check (Tự kiểm tra)

Máy giặt thực hiện quy trình tự chẩn đoán hệ thống hiện tại. Lỗi vận hành và các sự cố về máy móc sẽ hiển thị trên màn hình kết quả.

- Nhấn **Setting (cài đặt)** > **Self Check (Tự kiểm tra)** > **Start (Bắt đầu)**.

Calibration (Hiệu chuẩn)

Calibration (Hiệu chuẩn) bảo đảm máy giặt đo trọng lượng chính xác. Đảm bảo lồng giặt trống trước khi chạy Calibration (Hiệu chuẩn).

1. Nhấn **Setting (cài đặt)** > **Calibration (Hiệu chuẩn)** > **Start (Bắt đầu)**.
   - Cửa máy giặt sẽ bị khóa khi máy đang vận hành.
   - Lồng giặt sẽ quay theo chiều kim đồng hồ và ngược chiều kim đồng hồ trong vài phút.
2. Khi hoàn thành, máy giặt sẽ tự động tắt.

Untitled-37 35 2015-01-26 2:59:12

Update (Cập nhật)

Khi cập nhật khả dụng, bảng thông báo cập nhật sẽ xuất hiện lên màn hình.

Để kiểm tra phiên bản vi chương trình hiện tại.

1. Nhấn **Setting (cài đặt)** > **Update (Cập nhật)** để hiển thị phiên bản vi chương trình hiện tại.
2. Để cập nhật vi chương trình bằng tay, nhấn **Update (Cập nhật)**.

Vi chương trình sẽ được tự động cập nhật.

1. Gõ vào **Auto Update (Tự động cập nhật)** trên màn hình **Setting (cài đặt)**.
2. Trượt thanh **Auto Update (Tự động cập nhật)** thành **On (Bật)**. Quá trình cập nhật sẽ không hiển thị thông báo khi cập nhật khả dụng.

CẢNH BÁO

Không tháo cáp nguồn của máy giặt hoặc các bộ định tuyến trong khi cập nhật.

Help (Trợ giúp)

Tham khảo các hướng dẫn sử dụng sản phẩm và kiểm tra phần xử lý sự cố đối với một vấn đề.

- Nhấn **Setting (cài đặt)** > **Help (Trợ giúp)**.

Untitled-37 36 2015-01-26 2:59:12

Điều khiển Thông minh trên Di động của Samsung

Máy giặt này cung cấp hai ứng dụng điều khiển bằng thiết bị di động khác nhau mà bạn có thể sử dụng để điều khiển máy giặt thông qua kết nối mạng.

Các ứng dụng trên di động áp dụng cho tính năng Điều khiển Thông minh của các máy giặt thông minh Samsung

Samsung Smart Home

Với ứng dụng Samsung Smart Home (Ngôi nhà Thông minh Samsung) được thiết kế mới, bạn có thể tiếp cận máy giặt của bạn khi đang di chuyển và điều khiển hoặc kiểm tra tình trạng hoạt động của máy giặt.

Tải về ứng dụng "**Samsung Smart Home**" (Ngôi nhà Thông minh Samsung) từ Play Store (Cửa hàng Play Store) hay Apple Store (Cửa hàng Apple Store) và cài đặt trên thiết bị di động của bạn.

Samsung Smart Washer

Ứng dụng Samsung Smart Washer (Máy giặt Thông minh Samsung) cho phép bạn điều khiển các hoạt động của máy giặt trên thiết bị di động của bạn theo hai cách: Trong nhà và Ngoài trời.

Tải về ứng dụng "**Samsung Smart Washer**" (Máy giặt Thông minh Samsung) từ Play Store (Cửa hàng Play Store) hay Apple Store (Cửa hàng Apple Store) và cài đặt trên thiết bị di động của bạn.

Thiết lập Điều khiển Thông minh trên máy giặt

Để kích hoạt tính năng Điều khiển Thông minh, hãy lựa chọn một phương thức kết nối ứng dụng di động.

Chạm vào biểu tượng Cài đặt và chọn Điều khiển Thông minh trong trình đơn Mạng.

1. Chọn một phương thức kết nối đến ứng dụng di động.

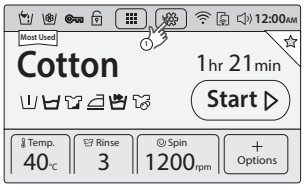

2. Chọn "Samsung Smart Home" (Ngôi nhà Thông minh Samsung) nếu bạn muốn điều khiển máy giặt thông qua ứng dụng tích hợp của Samsung.

   Chọn "Samsung Smart Washer" (Máy giặt Thông minh Samsung) nếu bạn muốn điều khiển máy giặt thông qua ứng dụng máy giặt Samsung.

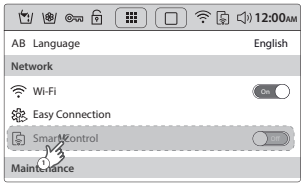

Untitled-37 37
2015-01-26 2:59:12

3. Sau khi thiết lập xong, những thay đổi của bạn được áp dụng và bạn có thể cần phải kết nối lại.

- Samsung Smart Home (Mặc định)
- Samsung Smart Washer

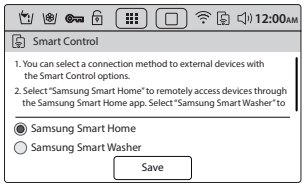

- Theo mặc định, sản phẩm này sử dụng ứng dụng Samsung Smart Home (Ngôi nhà Thông minh Samsung) được thiết kế mới (được khuyến nghị sử dụng) làm phương thức kết nối.
  - Đối với các mẫu điện thoại iPhone, ứng dụng Samsung Smart Home (Ngôi nhà Thông minh Samsung) dự kiến sẽ có mặt tại Apple Store (Cửa hàng Apple Store) từ nửa cuối năm 2014.
  - Ở một số nước, ứng dụng Samsung Smart Home (Ngôi nhà Thông minh Samsung) có thể không khả dụng. Nếu trường hợp này xảy ra, hãy sử dụng ứng dụng Samsung Smart Washer (Máy giặt Thông minh Samsung) để thay thế.

Untitled-37 38 2015-01-26 2:59:12

Ứng dụng Samsung Smart Home

Khi sử dụng ứng dụng Samsung Smart Home, hãy chắc chắn rằng bạn đã chọn "**Samsung Smart Home**" trong trình đơn Cài đặt.

Ứng dụng Samsung Smart Home cho phép bạn tiếp cận và điều khiển máy giặt khi di chuyển.

Lắp đặt

1. Truy cập vào Play Store đối với các thiết bị Android hoặc Apple App Store đối với các thiết bị iOS, tìm và chọn Samsung Smart Home.
2. Tải về và cài đặt ứng dụng Samsung Smart Home trên thiết bị di động của bạn.

- Ứng dụng Samsung Smart Home hỗ trợ Android OS 4.0 (ICS) hoặc mới hơn được tối ưu hóa cho điện thoại thông minh Samsung (Galaxy S và các dòng Galaxy Note). Một số chức năng của ứng dụng này có thể khác với các thiết bị khác.
- Ứng dụng này hỗ trợ iOS 7 hoặc mới hơn cho các kiểu iPhone.
- Để tăng cường hiệu suất, thiết kế giao diện người dùng của ứng dụng này có thể thay đổi mà không báo trước.
- Đối với các kiểu iPhone, ứng dụng này dự kiến sẽ khả dụng từ nửa cuối năm 2014 tại Apple App Store.

Chuẩn bị

1. Để kích hoạt ứng dụng, bạn sẽ được yêu cầu nhập tài khoản Samsung. Bạn sẽ được hướng dẫn tạo một tài khoản Samsung trực tiếp trên ứng dụng nếu bạn chưa có. Không cần sử dụng ứng dụng nào khác cho mục đích này.
2. Để kích hoạt ứng dụng, đầu tiên hãy đăng ký máy giặt của bạn với dịch vụ Samsung Smart Home.
   1) Chọn máy giặt trong danh sách thiết bị của ứng dụng Samsung Smart Home.
   2) Nhập các thông tin cần thiết về AP không dây mà bạn sử dụng cho kết nối không dây.
   3) Thực hiện theo các hướng dẫn trên màn hình để thiết lập cấu hình cho máy giặt.
   4) Trên máy giặt, hãy chọn **Setting (cài đặt)** > **Easy Connection (Kết nối dễ dàng)** để cấu hình các thiết lập mạng.
   5) Khi hoàn tất, bạn sẽ thấy biểu tượng máy giặt trên ứng dụng.

THẬN TRỌNG

- Bộ định tuyến Wi-Fi không được chứng nhận có thể không thiết lập được kết nối.
- Nếu lắp đặt máy giặt và AP gần lò vi sóng hoặc máy sấy tóc điện, Smart Control (Điều khiển thông minh) có thể không hoạt động đúng cách do nhiễu điện.
- Máy giặt chỉ hỗ trợ các giao thức Wi-Fi 2.4 Ghz.
- Môi trường xung quanh có thể ảnh hưởng đến hiệu suất mạng không dây.

- Nếu bạn chạy ứng dụng mà không đăng nhập, bạn sẽ thấy màn hình Account guidance (Hướng dẫn tạo tài khoản). Sau khi đăng nhập, bạn có thể thay đổi các thiết lập tài khoản của mình trong **Setting (cài đặt)** > **Account (Tài khoản)**.
- Người dùng Điện thoại thông minh Samsung có thể tự động đăng nhập vào ứng dụng khi đăng ký tài khoản của mình trong **Setting (cài đặt)**.

Untitled-37 39 2015-01-26 2:59:12

Sử dụng ứng dụng Samsung Smart Home

Các tính năng chính

- **Điều khiển tích hợp của thiết bị Samsung thông minh**

  Đăng ký thiết bị Samsung thông minh của bạn với dịch vụ Samsung Smart Home mà bạn có thể tận dụng để dễ dàng truy cập. Chọn biểu tượng máy giặt trên ứng dụng để truy cập các tính năng cốt lõi của máy giặt trong khi di chuyển.
- **Phím chính**

  Phím chính bao gồm 4 chế độ: Going out (Ra ngoài), Coming home (Về nhà), Good night (Chào buổi tối)và Good morning (Chào buổi sáng).
- **Điều khiển chat**

  Chat giữa các thiết bị thông minh và lấy thông tin để điều khiển thiết bị.
- **Giám sát căn nhà**

  Sử dụng camera tích hợp của thiết bị thông minh của bạn để giám sát phòng khách trong khi di chuyển.
- **Hỗ trợ khách hàng**

  Tải hướng dẫn về sản phẩm hoặc yêu cầu dịch vụ sửa chữa.

Một số tính năng của dịch vụ này có thể không khả dụng trên máy giặt.

Ứng dụng Smart Home Washing Machine

Điều khiển và giám sát máy giặt cả khi ở nhà và trong khi di chuyển.

1. Đăng ký máy giặt với ứng dụng Samsung Smart Home.
2. Để kích hoạt điều khiển từ xa, bật Smart Control (Điều khiển thông minh) trên máy giặt.
3. Chọn biểu tượng máy giặt trên thiết bị di động và ấn **Start (Bắt đầu)**.

Samsung Smart Home

Sản phẩm này là một máy giặt thông minh có hỗ trợ dịch vụ Samsung Smart Home. Để biết thêm thông tin, hãy truy cập www.samsung.com.

Untitled-37 40 2015-01-26 2:59:12

Ứng dụng Samsung smart washer app

Khi sử dụng ứng dụng Samsung Smart Washer, hãy chắc chắn rằng bạn đã chọn "**Samsung Smart Washer**" trong trình đơn Cài đặt.

Ứng dụng Samsung Smart Washer cho phép bạn kiểm soát một số chức năng của máy giặt trên thiết bị di động.

Tải về

1. Tìm kiếm Samsung Smart Washer trên Play Store hoặc Apple Store.
2. Tải và cài đặt các ứng dụng trên thiết bị di động.
3. Chạy ứng dụng Samsung Smart Washer trên thiết bị di động của bạn.

Kết nối với máy giặt

Máy giặt phải được kết nối mạng Wi-Fi.

Indoor control (Kiểm soát nội vi)

Để kích hoạt chế độ này, thiết bị di động phải được kết nối với cùng một mạng như máy giặt.

1. Trên thiết bị di động, nhấn **Indoor control (Kiểm soát nội vi)** để hiển thị một danh sách các mẫu máy giặt khả dụng.
2. Nhập tên mẫu máy giặt cần kết nối và sau đó nhấn **OK (Đồng ý)**. Cửa sổ xác thực sẽ xuất hiện.
3. Trên máy giặt, nhấn **Setting (cài đặt)**, và trượt thanh **Smart Control (Điều khiển thông minh)** thành **On (Bật)**. Quá trình xác thực bắt đầu.

Quá trình xác thực sẽ được yêu cầu trong lần đầu tiên sử dụng.

Outdoor control (Điều khiển ngoại vi)

Để kích hoạt chế độ này, máy giặt phải được đăng ký tại trang **Samsung Smart Appliance** (www.samsungsmartappliance.com).

1. Trên máy giặt, nhấn **Setting (cài đặt)**, và trượt thanh **Smart Control (Điều khiển thông minh)** thành **On (Bật)**.
2. Trên thiết bị di động, nhấn **Outdoor control (Điều khiển ngoại vi)**, và cung cấp các thông tin đăng nhập.

   Một danh sách các thiết bị đã được đăng ký xuất hiện.
3. Nhấn vào một thiết bị bạn muốn điều khiển trong danh sách. Hiện thời, một kết nối từ xa được thiết lập tự động giữa máy giặt và thiết bị di động.

Không yêu cầu quá trình xác thực.

Untitled-37 41 2015-01-26 2:59:13

Đăng ký

Đăng ký máy giặt của bạn tại trang Samsung Smart Appliance (www.samsungsmartappliance.com), để có thể điều khiển máy giặt từ xa. Máy giặt phải được kết nối mạng Wi-Fi.

1. Chuyển đến trang web **Samsung Smart Appliance** (www.samsungsmartappliance.com).
2. Cung cấp thông tin tài khoản Samsung khi đăng nhập. Nếu không phải là người dùng đã được đăng ký, nhấp vào Tạo một tài khoản Samsung và làm theo hướng dẫn trên màn hình.
3. Nhấp vào **My Page (Trang của tôi)**> **Add device (Thêm thiết bị)**, và thêm địa chỉ MAC của máy giặt.

   Để kiểm tra địa chỉ MAC, nhấn **Setting (cài đặt)**> **Network (Mạng)** trên máy giặt.
4. Nhấp vào **Get Approval (Cho phép)**.
5. Nhấn **Setting (cài đặt)** trên máy giặt và nhấn **OK (Đồng ý)** nếu được yêu cầu cho phép.

   Máy giặt được đăng ký sẽ được tìm thấy trên danh sách thiết bị trên trang web.

Do đó, Samsung Electronics tuyên bố rằng chiếc máy giặt này tuân thủ những yêu cầu thiết yếu và những cung cấp có liên quan khác theo Chỉ Thị 1999/5/EC.

Tuyên Bố chính thức về sự phù hợp có thể tìm thấy tại http://www.samsung.com, đi tới Hỗ Trợ> Tìm Hỗ Trợ Sản Phẩm và nhập tên mẫu.

Untitled-37 42 2015-01-26 2:59:13

Bảo trì

Giữ máy giặt sạch để ngăn ngừa hoạt động kém hiệu quả và kéo dài tuổi thọ sử dụng.

Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường)

Thực hiện chế độ vệ sinh lồng giặt thường xuyên để loại bỏ vi khuẩn.

1. Nhấn **Course (Chế độ)** > **Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường)**.
2. Di chuyển đến màn hình chính và nhấn **Start (Bắt đầu)**.

Nhiệt độ nước cho Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường) được thiết lập ở mức 70 °C, không thay đổi được..

LƯU Ý

Không sử dụng bất kỳ chất làm sạch nào khi vệ sinh lồng giặt. Dư lượng hóa chất trong lồng giặt sẽ làm giảm hiệu suất giặt.

Nhắc nhở Vệ sinh lồng giặt theo cách thân thiện với môi trường

- Nhắc nhở Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường) xuất hiện trên màn hình chính sau 40 lần giặt. Đó là lời khuyên để thực hiện Eco Drum Clean (Vệ sinh lồng giặt theo cách thân thiện với môi trường) thường xuyên.
- Khi lần đầu tiên nhìn thấy lời nhắc nhở này, bạn có thể bỏ qua chúng (tối đa 6 lần) bằng cách nhấn **Remind later (Nhắc nhở sau)**. Từ lần giặt thứ 7, nhắc nhở sẽ không xuất hiện nữa. Tuy nhiên, nó sẽ xuất hiện lần nữa vào lần giặt thứ 40 lần thứ hai.

Untitled-37 43 2015-01-26 2:59:13

Xả nước khẩn cấp

Trong trường hợp mất điện, xả nước trong lồng giặt trước khi lấy áo quần ra.

1. Rút dây cắm nguồn của máy giặt khỏi ổ điện.
2. Nhấn nhẹ vào khu vực phía trên nắp bộ lọc để mở.

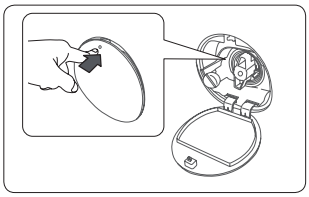

3. Kéo nhẹ ống xả khẩn cấp ra.

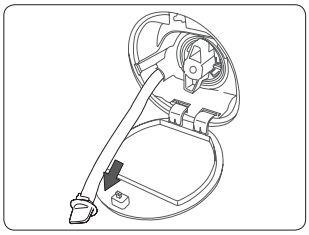

4. Giữ cuối ống xả và mở nắp.

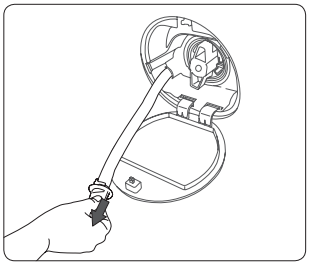

5. Để nước chảy vào bồn chứa.
6. Đóng nắp ống lại và đặt ống xả trở lại.
7. Đóng nắp bộ lọc.

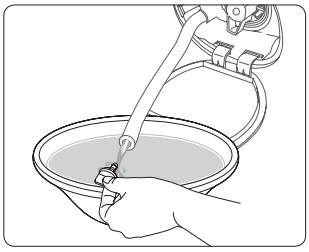

Untitled-37 44 2015-01-26 2:59:13

Vệ sinh

Màn hình máy giặt

Sử dụng một miếng vải mềm có thấm chất tẩy rửa gia dụng không bào mòn. Không xịt nước vào máy giặt.

Lưới lọc

Vệ sinh lưới lọc của ống cấp nước một hoặc hai lần một năm.

1. Tắt máy giặt và tháo dây nguồn.
2. Khóa vòi nước.
3. Nới lỏng và ngắt ống cấp nước từ phía sau của máy giặt. Phủ ống nước bằng một miếng vải để ngăn nước phun ra.

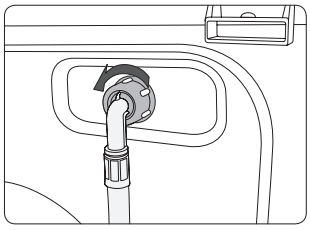

4. Sử dụng kìm để kéo lưới lọc từ van đầu vào ra.
5. Nhấn lưới lọc sâu trong nước để đầu nối cũng được ngập nước.
6. Phơi lưới lọc để khô hoàn toàn trong bóng râm.
7. Đặt lưới lọc trở lại ống cấp nước và đặt ống nước trở lại vị trí ban đầu.
8. Mở vòi nước.

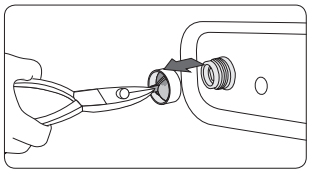

Nếu lưới lọc bị nghẹt, mã lỗi "**4E**" xuất hiện trên màn hình.

Untitled-37 45 2015-01-26 2:59:13

Bộ lọc mảnh vỡ

Nên làm sạch các bộ lọc mảnh vỡ 5 hoặc 6 lần một năm để ngăn ngừa tắc nghẽn. Bộ lọc mảnh vỡ bị nghẽn do mảnh vỡ có thể làm giảm hiệu ứng bong bóng.

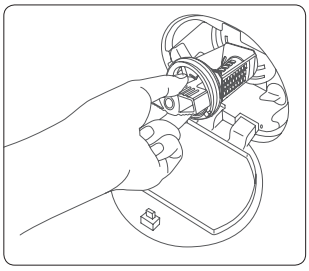

1. Tắt máy giặt và tháo dây nguồn.
2. Để xả nước trong lồng giặt vui lòng tha khảo "**Xả nước khẩn cấp**" ở trang **44**.
3. Mở nắp lọc bằng cách sử dụng một đồng xu hoặc chìa khóa.
4. Vặn nắp lọc của bộ lọc mảnh vỡ sang trái và xả phần nước còn sót lại.
5. Gỡ bộ lọc mảnh vỡ ra.

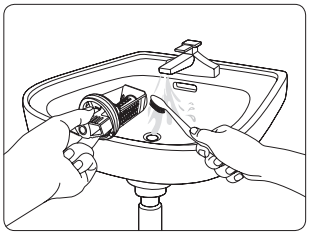

6. Vệ sinh bộ lọc mảnh vỡ bằng bàn chải mềm. Hãy đảm bảo rằng cánh quạt bơm thoát nước bên trong bộ lọc không bị nghẹt.
7. Đặt lại bộ lọc mảnh vỡ và vặn nắp bộ lọc sang phải.

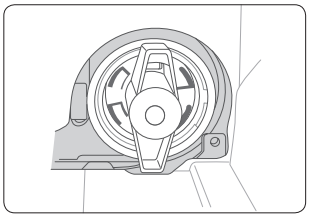

- Để mở nắp an toàn của bộ lọc, nhấn vào trong và xoay ngược chiều kim đồng hồ. Lò xo trong nắp sẽ giúp bạn mở nắp.
- Để đóng nắp an toàn, xoay theo chiều kim đồng hồ. Lò xo sẽ tạo ra âm thanh sột soạt, điều này bình thường.

- Nếu bộ lọc mảnh vỡ bị nghẹt, mã lỗi "**5E**" xuất hiện trên màn hình.

LƯU Ý

- Đảm bảo nắp bộ lọc đóng đúng cách sau khi vệ sinh. Nếu không, có thể gây ra rò rỉ.
- Đảm bảo bộ lọc đặt đúng cách sau khi vệ sinh. Nếu không, có thể gây ra lỗi trong vận hành hoặc rò rỉ.

Untitled-37 46 2015-01-26 2:59:14

Bộ phận tự động rót bột giặt

Bộ phận rót tự động phải được làm sạch định kỳ để đảm bảo vận hành đúng.

1. Gỡ Bộ phận rót tự động khỏi máy giặt.

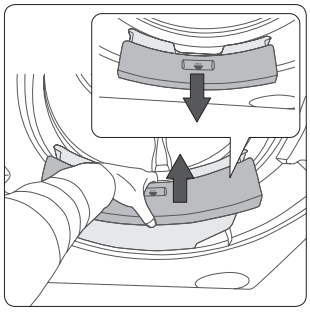

2. Quét sạch các hốc của bộ phận rót tự động bằng một miếng vải khô.

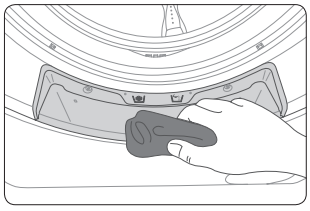

3. Gỡ hai nút bấm của bộ phận rót tự động cũng như hai nắp ở phía dưới và cho nước chảy qua bộ phận rót tự động để vệ sinh các khu vực bên trong.

   Đừng lắc bộ phận rót tự động vì bạn có thể bị bắn nước từ lỗ thông hơi của bộ phận rót tự động.
4. Đặt nút bấm và nắp về lại vị tria ban đầu.
5. Đặt lại bộ chiết rót Tự động vào vị trí ban đầu.

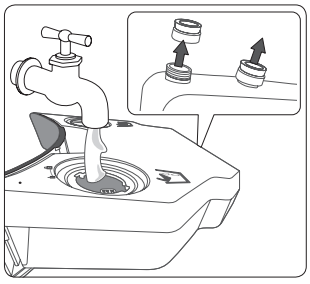

Untitled-37 47 2015-01-26 2:59:14

Rã đông

Máy giặt có thể bị đông lạnh nếu nhiệt độ dưới 0 °C.

1. Tắt máy giặt và tháo dây nguồn.
2. Đổ nước ấm lên vòi nước để nới lỏng ống cấp nước.
3. Ngắt ống cấp nước và ngâm trong nước ấm.
4. Đổ nước ấm vào lồng giặt và để trong 10 phút.
5. Ghép lại ống cấp nước với vòi nước.

Nếu máy giặt không hoạt động bình thường, lập lại các bước trên đến khi máy giặt hoạt động lại.

Bảo trì sau một thời gian dài không sử dụng.

Tránh để máy giặt không được sử dụng trong một thời gian dài.

Trong trường hợp này, xả nước khỏi máy giặt và rút dây nguồn.

1. Trên màn hình chính, nhấn **Course (Chế độ)** > **Cotton (Vải cô-tông)** và tùy chọn **Quick Wash (Giặt nhanh)**.
2. Làm trống lồng giặt và nhấn **Start (Bắt đầu)**.
3. Nếu chế độ hoàn tất, khóa vòi nước và ngắt ống cấp nước.
4. Tắt máy giặt và tháo dây nguồn.
5. Mở cửa để không khí lùa vào trong lồng giặt.

Untitled-37 48 2015-01-26 2:59:14

Xử lý sự cố

Các điểm kiểm tra

Nếu bạn gặp phải một vấn đề với máy giặt, đầu tiên kiểm tra bảng dưới đây và thử những lời đề nghị.

Sự cố	Hành động
Máy giặt không hoạt động.	• Đảm bảo đã cắm dây nguồn máy giặt. • Đảm bảo cửa đã đóng. • Đảm bảo đã mở vòi nước. • Nhấn **Start (Bắt đầu)** một lần nữa trên màn hình chính.
Cấp nước không đủ hoặc không có nước.	• Mở vòi nước hoàn toàn. • Đảm bảo ống cấp nước không bị đóng băng. • Đảm bảo ống cấp nước không bị gấp khúc hoặc nghẹt. • Vệ sinh bộ lọc trên ống cấp nước.
Máy giặt rung mạnh hoặc tạo ra tiếng ồn.	• Đảm bảo máy giặt được lắp đặt đúng cách trên mặt sàn. Nếu mặt sàn không bằng phẳng, sử dụng chân đế để điều chỉnh độ cao. • Đảm bảo đã gỡ bỏ các bu lông. • Đảm bảo máy giặt không va chạm với các vật thể khác. • Đảm bảo quần áo đã cân bằng.
Máy giặt không xả và/ hoặc quay được.	• Đảm bảo ống xả đặt thẳng so với hệ thống xả. • Đảm bảo bộ lọc mảnh vỡ không bị nghẹt.
Không mở được cửa.	• Nhấn **Start (Bắt đầu)** để ngừng vận hành máy giặt. • Cửa vẫn đóng khi đang ở chu trình nhiệt của chế độ làm sạch. • Có thể mất vài giây để ngưng các cơ chế khóa của máy giặt.
Máy giặt tạo ra quá nhiều bọt.	• Kiểm tra xem thiết lập Tự động rót chất tẩy và Tự động rót chất làm mềm đã được xác định đúng chưa. • Đảm bảo bạn sử dụng loại bột tẩy tương ứng.
Tôi không thể thêm bột tẩy.	• Kiểm tra nếu lượng bột tẩy và chất làm mềm đã đạt giới hạn. • Đảm bảo đã kích hoạt chức năng Auto Dispense (Bộ phận rót tự động), với các thiết lập Water Hardness (Độ cứng của Nước) Concentration (Nồng độ) đã được xác định đúng.

Nếu vẫn còn sự cố, vui lòng liên hệ với trung tâm dịch vụ của Samsung ở địa phương.

Untitled-37 49 2015-01-26 2:59:14

Mã thông tin

Nếu máy giặt không thể vận hành, bạn có thể thấy mã thông tin trên màn hình. Kiểm tra bảng bên dưới và thử các đề nghị sau đây.

Sự cố	Hành động
DE	• Đảm bảo cửa đã đóng. • Đảm bảo quần áo không kẹt vào cửa.
4E	• Đảm bảo đã mở vòi nước. • Đảm bảo áp lực nước phù hợp trong quá trình máy giặt vận hành, • Vệ sinh lưới lọc nếu nó bị nghẹt.
5E	• Vệ sinh bộ lọc mảnh vỡ nếu nó bị nghẹt. • Đảm bảo ống xả đặt thẳng so với hệ thống xả. • Vệ sinh lưới lọc nếu nó bị nghẹt.
UE	• Quần áo không cân bằng. Trải đều quần áo.
CE/3E/UC	• Người dùng không thể sửa được. Vui lòng liên hệ với trung tâm dịch vụ của Samsung ở địa phương.

Nếu mã thông tin vẫn tiếp tục hiển thị trên màn hình, vui lòng liên hệ với trung tâm dịch vụ của Samsung ở địa phương.

Untitled-37 50 2015-01-26 2:59:14

Thông số kỹ thuật

Bảo vệ môi trường

- Thiết bị được sản xuất từ các vật liệu có thể tái chế được. Nếu bạn quyết định không dùng thiết bị này nữa, hãy tuân thủ quy định xử lý chất thải của địa phương. Cắt dây nguồn để thiết bị không thể kết nối với nguồn điện. Tháo bỏ cửa để động vật và trẻ nhỏ không thể kẹt bên trong thiết bị.
- Không dùng quá lượng chất tẩy được đề nghị trong hướng dẫn của nhà sản xuất chất tẩy.
- Sử dụng các chất tẩy bẩn và thuốc tẩy trước khi giặt nếu cần thiết.
- Tiết kiệm nước và điện bằng cách giặt đến trọng lượng tối đa (trọng lượng chính xác tùy theo chương trình sử dụng).

Untitled-37 51 2015-01-26 2:59:14

Biểu đồ các loại vải

Các biểu tượng dưới đây cho biết các hướng dẫn về xử lý vải sợi. Các nhãn bao gồm bốn biểu tượng theo thứ tự sau: giặt, tẩy, phơi và ủi (và giặt khô khi cần). Việc sử dụng các biểu tượng đảm bảo tính thống nhất giữa các nhà sản xuất hàng may mặc trong nước và nhập khẩu. Tuân thủ các hướng dẫn trên nhãn để tối ưu tuổi thọ vải vóc và giảm thiểu các hư hại về quần áo.

	Vải có độ bền		Không được ủi
	Vải mỏng nhẹ		Có thể giặt khô để tránh tác động cuả dung môi.
	Giặt ở nhiệt độ 95 ˚C		Giặt khô
	Giặt ở nhiệt độ 60 ˚C		Chỉ giặt khô với perchloride, nhiên liệu dễ bay hơi, cồn nguyên chất hoặc R113
	Giặt ở nhiệt độ 40 ˚C		Chỉ giặt khô với nhiên liệu cho máy bay, cồn nguyên chất hoặc R113
	Giặt ở nhiệt độ 30 ˚C		Không được giặt khô
	Chỉ giặt bằng tay		Trải thẳng khi phơi
	Chỉ giặt khô		Có thể phơi treo
	Có thể tẩy sạch bằng nước lạnh		Phơi khô trên các giá treo đồ
	Không được tẩy		Sấy khô, nhiệt độ bình thường
	Ủi tối đa ở nhiệt độ 200 ˚C		Sấy khô, giảm nhiệt
	Ủi tối đa ở nhiệt độ 150 ˚C		Không sấy khô
	Ủi tối đa ở nhiệt độ 100 ˚C		

Untitled-37 52 2015-01-26 2:59:15

Bảng thông số kỹ thuật

KIỂU			MÁY GIẶT CỬA TRƯỚC
TÊN MẪU			WW10H9*****
KÍCH THƯỚC			W600xD600xH850(mm)
ÁP LỰC NƯỚC			50 kPa ~ 800 kPa
THỂ TÍCH NƯỚC			68 L
TRỌNG LƯỢNG THÔ			87 kg
CÔNG SUẤT GIẶT VÀ VẮT			10,0 kg
MỨC TIÊU THỤ ĐIỆN	GIẶT	220 V	150 W
		240 V	150 W
	GIẶT VÀ SẤY KHÔ	220 V	2000 W
		240 V	2300 W
	SPIN (VẮT)	220~240 V	700 W
	PUMPING (BƠM)		30 W
CHU KỲ VẮT		vòng/phút	1600

Untitled-37 53 2015-01-26 2:59:15

Memo

Memo

CÓ CÂU HỎI HOẶC Ý KIẾN NÀO KHÁC?

QUỐC GIA	GỌI ĐIỆN THOẠI	HOẶC XEM TRỰC TUYẾN TẠI
VIETNAM	1800 588 889	www.samsung.com/vn/support

DC68-03377G-01